

PHILIPS

Epilator, mini epilator, tweezers

Satinelle Essential

For legs, body and face

HP6550/01



Enjoy long-lasting smooth skin in all body areas Trio smooth set with exclusive pouch

Enjoy fast hair removal on legs and arms with the Satinelle epilator and delicate, precise epilation on armpits and bikini area with the mini epilator. Use the tweezers for facial touch ups or brows. BONUS: Limited edition storage bag

Long lasting smoothness

- Efficient root hair removal

Dedicated solution per body area

- Fast epilation solution for legs and arms
- Delicate epilation solution for sensitive areas
- Matching tweezers for facial touch-ups and brows

Easy cleaning

- Cleaning brush included and washable epilation head.

Gift item

- Exclusive pouch

Highlights

Efficient root hair removal




Our epilators have uniquely designed precision discs that catch even the shortest hairs (0.5mm). That's hairs 4 x shorter than with wax, for up to 4 weeks of hair-free skin.

Epilator for legs & arms

The Satinelle epilator has a large head for fast epilation on legs and arms. Its rounded shape fits perfectly into your hand for comfortable hair removal.

Cordless mini epilator

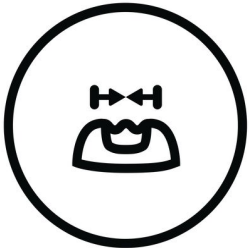

The mini epilator has a narrow head specifically designed to catch hairs in hard to reach areas without pulling skin. It's battery operated for maximum convenience.

Precise face tweezer solution

The set comes with matching tweezers ideal for removing hairs on face (upper lip, jaws) or for shaping eyebrows.

Easy cleaning



A cleaning brush is included to remove loose hairs from epilator discs. Washable epilation heads ensure hygiene.

Bonus: Exclusive pouch

Keeping epilators in a dry, dust-free space keeps them hygienic. The set includes a special limited edition storage bag for just that!

Specifications

Accessories

Cleaning brush

Pouch: Exclusive pouch

Features

Gentle tweezing discs

Speed settings: 1 setting

Ease of use

Handle: Ergonomic

Performance

Epilator head: Epilator: 23.5 mm, Mini epilator: 10 mm, Washable

Epilation discs: Metal discs

Power

Battery Type: Mini epilator: 2x AA

Service

Guarantee: 2 years

Technical specifications

Color(s): Purple deco, White

Number of catching points: Epilator: 20, Mini epilator: 12

Catching actions per minute: Mini epilator: 32,000

Number of discs: Epilator: 21

Number of tweezers: Mini epilator: 8

Pulling actions/second speed 1: Epilator: 600

Rotations per minute: Mini epilator: 4000

Voltage: Epilator: 13 V, Mini epilator: 3

V, Adapter: 13 V / 400 mA,

Frequency: Epilator: 50-60 Hz

Wattage: Epilator: 5W, Mini epilator: 5 W

