

PHILIPS

Hair clipper

Hairclipper series 3000

Stainless steel blades

13 length settings

60mins cordless use/8h charge

Adjustable beard comb and case



HC3420/80



HAIRCLIPPER Series 3000 - Cuts twice as fast* with DualCut technology for a faster, sharper cut

The HAIRCLIPPER Series 3000 is built to last, and engineered to perform. The innovative cutting element, stainless steel blades and adjustable beard and hair combs are designed to give you a fast, sharp cut, time after time.

Performance

- Double-sharpened cutting element with reduced friction
- Self-sharpening steel blades for long-lasting sharpness

Precise length control

- Easy to select and lock in 13 length settings: 0.5 to 23mm
- Includes a beard comb for 12 adjustable lengths: 1 to 23mm

Easy to use

- 60 minutes of cordless use after an 8-hour charge
- 'Quick release' blades for easy cleaning

Built to last


- 2yr guarantee plus 3yrs when you register the product online
- Hard case for reliable storage
- The blades never need oiling



asimpleswitch.com


Highlights

DualCut Technology

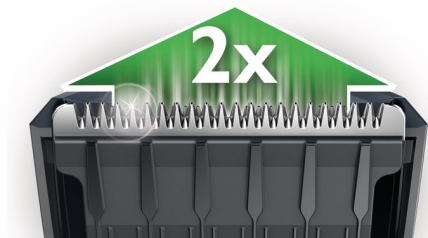

Power through any hair type with our advanced DualCutTechnology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to perform time after time, cutting hair twice as fast as regular Philips clippers.*

Stainless steel blades

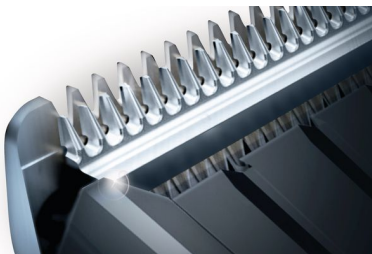

Self-sharpening stainless steel blades for long-lasting sharpness.

13 lock-in length settings



Simply select and lock in the length you want with the adjustable comb which provides 12 lock-in length settings from 1mm to 23mm, with precisely 2mm between each length. Or you can use it without the comb for a close 0.5mm trim.

Corded & powerful cordless use



Use the clipper corded or cordless for maximum power and freedom, with 60 minutes of cordless power after 8 hours of charging.

Easy to clean




Simply click open the detachable head to quickly release and wash the blades.

5-year worldwide warranty



All of our grooming products are built to last. They come with a worldwide guarantee and worldwide voltage compatibility. Simply register your clipper on www.philips.com/5years to receive an additional 3 years on top of your standard 2-year Philips guarantee, giving you a 5-year worldwide warranty in total.

Bonus adjustable beard comb

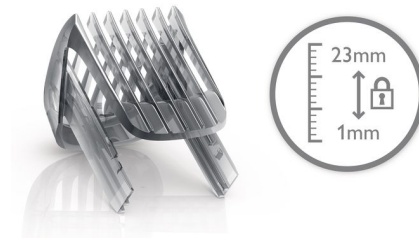

Turn the wheel to simply select and lock in the length you want, whether you have a beard or you want perfect stubble. Just attach the adjustable beard comb for 12 lock-in length settings from 1 to 23mm, with precisely 2mm between each length. Or you can use it without the comb for a close 0.5mm trim.

Hard storage case



Your clipper comes with a reliable hard case for complete durability, to ensure it is kept in optimum condition for ultimate power and precision, time after time.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Cutting system

Cutter width: 41 mm

Cutting element: Stainless steel blades

Number of length settings: 13

Range of length settings: From 0.5 to 23 mm

Precision (size of steps): By 2 mm

Precision beard comb: 1-23mm adjustable beard comb

Power system

Operation: Corded and cordless

Charging time: 8 hour(s)

Running time: 60 minutes

Battery type: Ni-MH

Ease of use

Cleaning: Washable blades

Maintenance free: No oil needed

Service

2-year worldwide guarantee: Yes, Plus 3-years with registration

Storage

Case: Hard case

