

PHILIPS


Wet and dry electric shaver

Shaver series 5000

MultiPrecision Blade System

5-direction Flex Heads

SmartClick precision trimmer

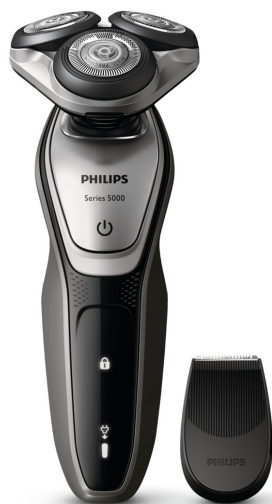

S5216/06



Close, Fast Shave

Protects 10X better versus a regular blade

This Philips series 5000 shaver protects your skin while you enjoy a refreshing shave. Our MultiPrecision Blade System with rounded profile heads glides smoothly across, and it's designed to protect your skin.

A comfortable and close end result

- Blades raise then cut long and short hairs for a fast shave
- Heads flex in 5 directions for a fast close shave
- Get a comfortable dry or refreshing wet shave with Aquatec
- Lifts hairs to cut comfortably close

Easy to use

- 40 minutes of cordless shaving
- 1-hour charging time
- Shaver can be rinsed clean under the tap
- 1-level battery and travel lock Indicators
- 2-year guarantee, worldwide voltage and replaceable blades

Get the most out of your shaver

- Click-on trimmer for perfect mustache and sideburn trimming



reddot award 2016
winner

Highlights

MultiPrecision Blade System



Get a shave that's fast and close. Our MultiPrecision Blade System raises and cuts all hairs and remaining stubble – all in a few strokes.

5-direction Flex Heads



5-direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on neck and jaw line.

Aquatec Wet & Dry



Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

One touch open



Simply pop the heads open, and rinse thoroughly under the tap.

40 minutes of cordless shaving

You'll have 40+ minutes of running time – that's about 13 shaves – on a one-hour charge. Or choose to shave with the device plugged in.

1-hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

SmartClick precision trimmer



Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your mustache and trimming your sideburns.

LED display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 1-level Battery Indicator - Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator



iF DESIGN AWARD 2016
Design Excellence iF DESIGN AWARD 2016



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



reddot award 2016
winner

Red Dot Award 2016: Winner

Design Excellence Red Dot Award 2016: Winner

Specifications

Shaving Performance

Shaving system: MultiPrecision Blade System, Super Lift & Cut Action

Contour following: 5-direction Flex Heads

SkinComfort: AquaTec Wet & Dry

Accessories

SmartClick: Precision trimmer

Maintenance: Protective cap

Power

Battery Type: Lithium-ion

Run time: 40 min / 13 shaves

Charging: 1 hour full charge, Quick charge 5

min for 1 shave

Automatic voltage: 100-240 V

Max power consumption: 9 W

Stand-by power: 0.1 W

Ease of use

Display: 1 level battery indicator, Battery low indicator, Charging indicator, Cleaning indicator, Replace shaving heads indicator, Travel lock indicator

Cleaning: Fully washable

Operation: Cordless use, Unplug before use

Design

Handle: Ergonomic grip & handling

Color: Super Nova Silver – Black Metallic Chrome

Service

2-year guarantee

Replacement head: Replace every 2 yrs with SH50

