

# PHILIPS

Wet and Dry electric shaver

SatinShave Advanced

Single foil shaver

8hr recharge

1 accessory



BRL130/00



## Glides smoothly for a skin friendly shave

Experience a close yet gentle shave on your legs and body. The SatinShave Advanced ladyshaver gives you smooth skin even in the shower or bath. Achieve hair-free skin without irritation, easy and convenient.

### Smooth skin

- Floating foil for an even shave

### A skin friendly shave

- Pearl-tip trimmers protect from scratches

### Effortless control

- First epilator with S-shaped handle

### Easy to use


- Wet & dry for use in bath or shower
- Battery indicator light



[asimpleswitch.com](http://asimpleswitch.com)


# Highlights

## Floating foil

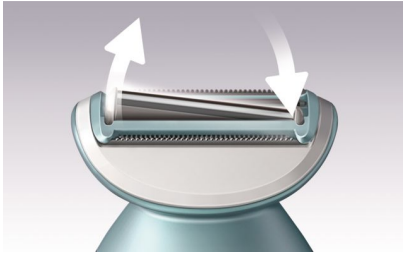

The floating foil glides naturally over your curves and contours, maintaining close contact with your skin for an even shave.

## Pearl-tip trimmer

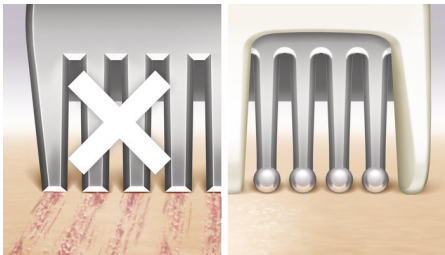

The rounded pearl-tip trimmers in front and behind the shaving foil, keep the shaver gliding smoothly over your skin and prevent scratches for a skin-friendly shave.

## Ergonomic S-shaped handle




The ergonomic S-shaped handle is easy to steer for maximum control and better reach with natural and precise movements, all over your body.

## Wet & dry use



For a gentle and comfortable use during your shower or bath routine with anti slip grip for optimal wet & dry use.

## Battery indicator light

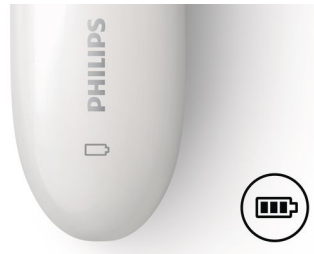

Battery indicator light shows when your shaver is charging, full or low battery.

# Specifications

## Accessories

- Trimming comb
- Cleaning brush

## Ease of use

- Wet and dry use
- Cordless
- Handle: Ergonomic
- Battery indicator: Battery low, Battery charging, Battery full

## Performance

- Shaving head: Single foil shaver
- Skin care features: Rounded pearl tip trimmers

## Power

- Battery Type: Lithium-ion
- Usage time: 1 hour
- Charging: Rechargeable, 8 hours charging time

## Technical specifications

- Voltage: 8V
- Material foil: Nickel
- Number of shaving foils: 1



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.