

PHILIPS

Beard trimmer

Beardtrimmer series
3000

1mm precision settings

Stainless steel blades

45 min cordless use/10h charge

Lift & Trim system



BT3208/13



3-day beard made easy

Lift & Trim system cuts 30% faster*

This trimmer with the innovative Lift & Trim system lifts and captures more low-lying hairs for efficient, even trimming results. This way you will easily achieve the 3-day stubble, short beard or long beard look you want.

Easy even trimming

- Trims evenly and captures low-lying hairs
- Get a perfect but protective trim
- Skin-friendly blades for smooth skin

Easy to use

- Adjusts to different length settings
- Cordless use for up to 45 mins
- Simple maintenance
- Easy to grip

Built to last

- Warranty for purchase protection



asimpleswitch.com

Highlights

Lift & Trim system

Perfect for stubble, the Philips beard trimmer features our new Lift & Trim system: a comb that lifts and guides the hairs to the level of the blades for an even trim.

Self-sharpening blades


The self-sharpening steel blades on the Philips 3000 beard trimmer stay as sharp and effective as on day 1 to deliver a perfect yet protective trim, time after time.

Skin-friendly blades



Designed to prevent scratches and irritation, the blades have rounded tips for smoother skin contact.

Precision Dial - 10 settings

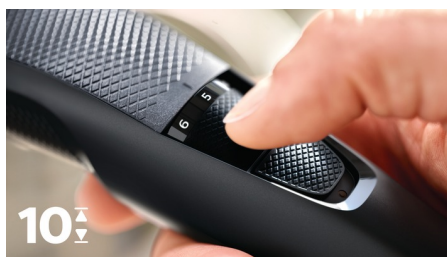

An effective beard trimmer that cuts to the exact length you're after. Just spin the zoom wheel to one of 10 length settings between 0.5 and 10mm in 1mm increments.

45 min cordless use



Don't get tangled up in your stubble trimmer – one 10 hour charge provides up to 45 minutes of grooming time.

Easy to clean

Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Ergonomic design



A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Built to last

All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Specifications

Cutting system

Precision (size of steps): By 1mm
Range of length settings: 0.5 up to 10 mm
Cutter width: 32 mm
Cutting element: Stainless steel blades
Non-scratching teeth: For more comfort

Create the look you want

Number of length settings: 10 integrated length settings

Accessories

Comb: Lift & Trim system
Maintenance: Cleaning brush

Power

Run time: 45 minutes
Charging: 10 hours full charge
Battery Type: NiMH
Automatic voltage: 100-240 V

Ease of use

Zoom wheel: Easily adjust length settings
Display: Charging indicator on adapter
Cleaning: Rinseable attachments
Operation: Cordless use

Design

Handle: Ergonomic Easy Grip

Service

2-year guarantee
No oil needed



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.