

# PHILIPS

## Hair clipper

### Hairclipper series 7000

Stainless steel blades

60 length settings

120mins cordless use/1h charge



HC7460/15



## 1 click, total precision with Motorized Combs

HAIRCLIPPER Series 7000 gives you total precision and control of your haircut with just one click. With Motorized Combs and a high performance cutting element, it's the only clipper that gives consistently the expected results.

#### Ultimate precision and control

- Control buttons
- Easy to select and lock-in 60 length settings: 0,5 to 42mm
- Adjustable hair combs for the best clipping results

#### Performance

- Self-sharpening steel blades for long-lasting sharpness
- Motorized Combs for easy length selection
- Auto Turbo to boost cutting speed
- Double-sharpened cutting element cuts two times faster\*
- 2-year guarantee

#### Easy to use


- Remembers the last used length setting
- 120 minutes of cordless use after a 1-hour charge



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## Control buttons

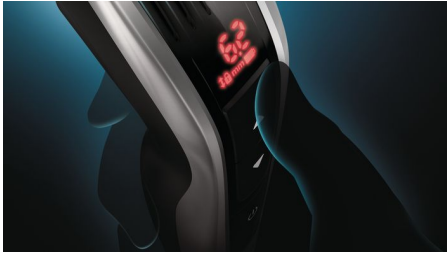

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock-in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

## 60 lock-in length settings



Use the Control Buttons to precisely select and lock-in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0,2mm increments between 1 and 7mm, and 1mm between 7 and 42mm. Or you can use it without the comb for a close 0.5mm trim.


## 3 adjustable hair combs



The clipper comes with 3 adjustable hair combs: from 1 to 7mm, 7 to 24mm and 24 to 42mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0,2mm increments between 1 and 7mm, and

1mm between 7 and 42mm. Or you can use the clipper without the comb for a close 0.5mm trim.

## Stainless steel blades

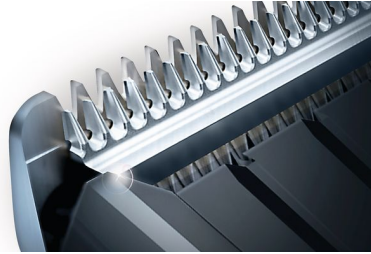

Self-sharpening stainless steel blades for long-lasting sharpness.

## Motorized Combs



The motor powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.

## Auto Turbo



The Turbo feature automatically boosts the speed when reaching thick hair, allowing you to get a perfect, effortless cut.

## DualCut Technology



Power through any hair type with our advanced DualCut Technology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to cut hair twice as fast as regular Philips clippers, with the added confidence of a robust steel guard for ultimate durability.

## Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Cutting system

Cutter width: 41mm

Cutting element: Stainless steel blades

Number of length settings: 60

Precision (size of steps): 0.2mm/1mm

Range of length settings: From 0.5 to 42 mm

Length selection: Control Buttons, Motorized Combs

## Accessories

Attachments: 3 hair combs

## Ease of use

Cleaning: Removable cutter

Maintenance free: No oil needed

Memory function

## Power system

Motor: Auto Turbo

Battery type: Li-ion

Operation: Corded and cordless

Running time: 120 minutes

Charging time: 1 hour

## Service

2-year worldwide guarantee

