

PHILIPS

Wet and dry electric shaver

AquaTouch

Lift & Cut Flexing heads

40 min cordless use/8h charge

Pop-up trimmer



AT756/16



Great skin protection, smooth shave

Now enjoy a refreshing shave without worrying about damaging your skin. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

Also use wet for enhanced skin comfort

- Aquatec: refreshing wet shave with foam or an easy dry shave

Shave smooth

- Lift and Cut blades lift hairs to cut for a close shave

Protect your skin

- Glides smoothly over the curves of your face

Ease of use

- 40 shaving minutes, 8 hour charge
- Washable shaver with QuickRinse system
- Perfect for trimming your sideburns and moustache



asimpleswitch.com

Highlights

Aquatec wet & dry



The Aquatec seal on the shaver makes it 100% waterproof. Use it in the shower with your favourite shaving gel or foam for extra skin protection. Naturally, you can also shave dry for convenience. When you are done, simply pop the heads open and rinse under the tap to easily clean your shaver.

Lift and Cut blades




Lift and Cut dual blade system lifts hairs to cut comfortably below skin level.

Skin protection system



Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.

40+ Shaving Minutes

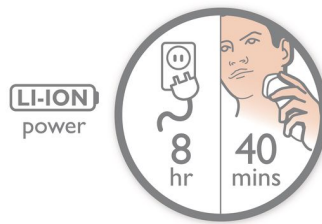

An energy-efficient, powerful lithium-ion battery gives you more shaves per charge. You'll have up to 45 minutes of shaving time – that's around 14 shaves, after 8 hours of charging.

Fully waterproof



With QuickRinse system to clean under the tap and can be used under the shower.

Pop up trimmer



Complete your look by using the pop up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Specifications

Shaving Performance

Shaving system: Lift & Cut blades

Contour following: Dynamic Contour

Response

Styling: Integrated pop up trimmer

SkinComfort: SkinProtection System, AquaTec Wet & Dry

Ease of use

Display: 1 LED indication, Battery full indication, Battery low indication, Charging indication

Charging: Rechargeable

Cleaning: Fully waterproof, QuickRinse hair chamber

Shaving time: 40+ minutes, up to 14 shaves

Charging time: 8 hours

Display indicates: Battery full, Battery low, Charging

Operation: Cordless use, Rechargeable battery

Wet & Dry

Design

Finishing: NA

Color: NA

Handle: Rubber grip, Ergonomic Easy Grip

Accessories

Maintenance: Cleaning brush, Protective cap

Service

Replacement head: HQ8 has been replaced by SH50

Guarantee: 2-year guarantee

Replacement heads: Replace every 2 yrs with HQ8

Power

Automatic voltage: 100–240 V

Stand-by power: < 0.25 W

Maximum power consumption: 5.4 W



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.