

PHILIPS

NORELCO

Showerproof body
groomer, Series 3000

Bodygroom 3100

Skin comfort system

3 fixed combs

50mins cordless use/8h charge

Back attachment



BG2034/49



Close trim, comfortable shave

Even in hard-to-reach areas

The Series 3000 is designed to power through hair, without compromise on skin comfort. Whether on the chest or hard-to-reach areas like the back, you can shave with the skin comfort system or trim using the length combs included.

Skin-friendly performance

- Confidently trim or shave all body zones
- Rounded tips and hypoallergenic foil for skin comfort
- Includes 3 combs for a 1/8, 3/16 or 9/32" trim

Easy to use

- Extra long handle makes it easier to reach your back
- 50 minutes cordless use after an 8-hour charge
- Easy to clean and use in or out of the shower
- Easy to grip

Built to last

- Warranty for purchase protection



asimpleswitch.com

Highlights

Skin comfort system



Designed to be safe and comfortable for underarms, chest & abs, back & shoulders, groin area and legs. The skin comfort system catches and cuts hairs of different lengths, without the need for multiple tools or skin contact with sharp edges. The bi-directional trimmers cut longer hairs, which are shaved by the foil for a closer result.

Skin-friendly tips and foil



The skin comfort system features a hypo-allergenic foil and rounded tips to protect your skin while shaving.

3 combs included, 1/8-9/32"



3 combs included for different body hair lengths. Attach the combs onto the shaving system, to trim hair to fixed length settings of 3mm (1/8"), 5mm (3/16"), or 7mm (9/32"). You can use the shaving system without the

combs, for a closer result. For thicker hair, pre-trimming with the fixed combs is recommended.

Shave your back




Conveniently remove back hair. This attachment has been specially designed for convenient back grooming.

Rechargeable battery power



High-power NiMH battery for full body use, with 50 minutes of cordless use after an 8-hour charge. The battery light indicates power status, when the battery is low or full.

100% Showerproof

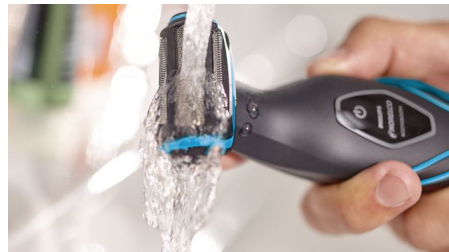

Provides a comfortable and close result in or out of the shower. The body groomer is 100% water-resistant, so you can simply rinse it clean when you've finished. For longer hair, trimming performance may be better on dry hair.

Ergonomic grip



Your body groomer is easy to hold and manoeuvre, with a rubber ergonomic grip to help you keep control while you trim.

Built to last



All of our grooming products are built to last. They come with a 2 year warranty and they never need to be oiled.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Cutting system

Cutter width: 32 mm

Shaving element: Foil with two pre-trimmers

Skin comfort: Skin comfort system

Create the look you want

Number of length settings: 3 integrated length settings

Accessories

Back handle attachment

Ease of use

Wet & Dry: Showerproof and easy cleaning,

Fully washable

Secured length settings

Operation: Cordless use

Maintenance free: No oil needed

Design

Handle: Ergonomic grip & handling

Power

Battery type: Ni-MH

Run time: 50 minutes

Charging: 8 hours full charge

Service

2-year worldwide warranty

