

PHILIPS

Dry electric shaver

PowerTouch Pro

TripleTrack blades

Pivoting heads



PT920/21



TripleTrack

Shave 50% more in every stroke

This Philips PowerTouch pro shaver adds power to your morning. Now with more minutes, full washability and proven Triple Track shaving performance, PowerTouch ensures that you are always ready to quickly finish your morning routine.



The fastest way through your morning routine

- 60+ minutes of cordless shaving, 1 hour charge
- Jet Clean system cleans, charges and renews your shaver
- Washable shaver with QuickRinse system

A comfortable and close end result

- TripleTrack heads offer 50% more shaving surface
- DualPrecision cutting shaves even the shortest stubble
- Super Lift & Cut system for a comfortably close shave
- SmartPivot maintains constant skin contact
- Dynamic contour response adjusts to face and neck curves
- Pop up trimmer perfect for sideburns and moustache



asimpleswitch.com

Highlights

Efficient Power System:60+ min



60+ minutes of cordless power for 21 shaves. Fully charges in 1 hour so it is always ready when you are

Super Lift&Cut Action

The dual blade system built into our electric shaver lifts hairs to cut comfortably below skin level for a closer shave


Dynamic contour response

The shaver automatically adjusts to every curve of your face and neck for a smoother shave

DualPrecision Cutting

DualPrecision shaving heads of the electric shaver have slots to shave the normal hairs and holes to shave even the shortest stubble

Fully washable shaver

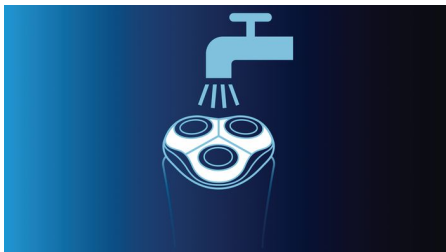

Fully washable electric shaver with QuickRinse system rinses clean in less time

SmartPivot


The shaver constantly keeps the 3 shaving heads in close contact with your skin for a fast shave

TripleTrack shaving heads



Three shaving tracks for 50% more shaving surface for a fast and close shave

Pop up trimmer

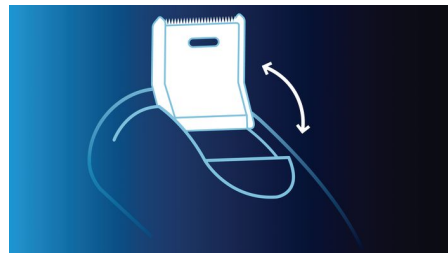

The shaver has a full width, pop-up trimmer is perfect for grooming your sideburns and moustache

Jet Clean system



Thoroughly washes, lubricates, dries and charges to renew the shaver for a superior shave day after day

Specifications

Shaving Performance

Shaving system: TripleTrack cutting system, DualPrecision cutting, Super Lift&Cut

Contour following: SmartPivot, Dynamic contour response

Styling: Integrated pop up trimmer

Ease of use

Shaving time: 60+ minutes

Charging: Rechargeable, Cordless & corded operation, Quick charge 3 min for 1 shave

Charging time: 1 hour

Display: 2 LED indication, Charging indication, Battery low indication, Battery full indication, Quick charge indication

Cleaning: Fully washable shaver, Quick rinse hair chamber

Jet Clean: Includes Jet Clean unit

Design

Handle: Easy grip, Ribbed rubber grip

Finishing: Front Shell (lacquered), Brushed chrome deco ring, Mirror black display panel

Color: Griio anthracite

Accessories

Pouch: Soft pouch

Maintenance: Cleaning brush, Protective cap

Jet Clean: Jet Clean

Power

Battery type: Lithium-ion

Automatic voltage: 100-240 V

Stand-by power: < 0.25 W

Max power consumption: 5.4 W

Service

2-year guarantee

Replacement head: Replace every 2 yrs with HQ9



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.