

PHILIPS

wet and dry electric shaver

AquaTouch

TripleTrack blades

Pivoting heads



AT940/20



Great skin protection, smooth shave

Now enjoy a refreshing shave without worrying about damaging your skin. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

Also use wet for enhanced skin comfort

- Optimized for use with gel or foam for enhanced skin comfort

Protect your skin

- Glides smoothly over the curves of your face
- SmartPivot maintains constant skin contact

Shave smooth

- TripleTrack heads offer 50% more shaving surface
- For a comfortably close shave
- Shaves even the shortest stubble

Ease of use

- Pop up trimmer perfect for sideburns and moustache
- Washable shaver with QuickRinse system
- 3 minute quick charge for one shave
- 60+ minutes of cordless shaving on one charge



asimpleswitch.com

Highlights

Aquatec wet & dry



Aquatec seal for a comfortable dry shave and a refreshing wet shave. Optimized for use with shaving gel or foam for enhanced skin comfort, even in the shower.

Skin Protection System




Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.

TripleTrack shaving heads




Three shaving tracks for 50% more shaving surface for a fast and close shave

SmartPivot

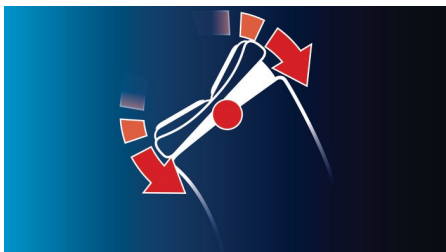


The shaver constantly keeps the 3 shaving heads in close contact with your skin for a fast shave

Super Lift & Cut Action

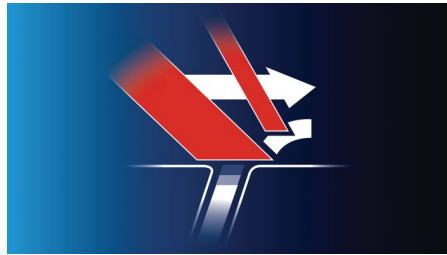

For a close shave, the dual blade system built into the Philips electric shaver, lifts hairs to cut comfortably closer.

DualPrecision Cutting

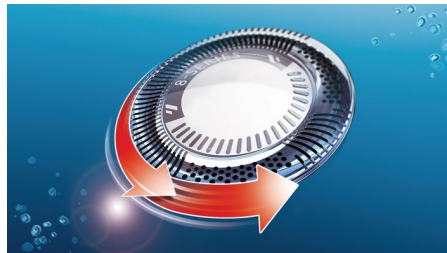

DualPrecision shaving heads have slots to shave the normal hairs and holes to shave even the shortest stubble.

Pop up trimmer



The shaver has a full width, pop-up trimmer is perfect for grooming your sideburns and moustache

Fully waterproof



With QuickRinse system to clean under the tap and can be used in the shower

Quick charge for 1 shave



3 minute quick charge provides enough power for one shave, so that you are always fast even when the battery is empty.

Cordless use 60+ minutes



60+ minutes of cordless power for 20 shaves. Fully charges in 1 hour, so it's always ready when you are.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Shaving Performance

Shaving system: TripleTrack cutting system, DualPrecision cutting, Super Lift&Cut

Contour-following: SmartPivot, Dynamic contour response

Styling: Integrated pop up trimmer

Ease of use

Shaving time: 60+ minutes

Charging: Rechargeable, Cordless & corded operation, Quick charge 3 min for 1 shave

Charging time: 1 hour

Display: 2 LED indication, Charging indication, Battery low indication, Battery full

indication, Quick charge indication

Cleaning: Fully washable shaver, Quick rinse hair chamber

Design

Handle: Easy grip, Ribbed rubber grip

Finishing: Decopanel chromed, Front Shell Deep Black Met.

Color: Deep Black Metallic

Accessories

Stand: Charging stand

Pouch: Shower hanger/storage pouch

Maintenance: Cleaning brush, Protective cap

Power

Battery type: Li-Ion

Automatic voltage: 100-240 V

Stand-by power: < 0.2 W

Max power consumption: 5.4 W

Service

2-year guarantee

Replacement head: Replace every yr with HQ9

