

PHILIPS

Wet and dry electric shaver

Shaver series 3000

DualPrecision Flexing heads

50 min cordless use/1h charge

Pop-up trimmer



AT891/20



Great skin protection, smooth shave

Now enjoy a refreshing shave without worrying about damaging your skin. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

Also use wet for enhanced skin comfort

- Aquatec: refreshing wet shave with foam or an easy dry shave

Shave smooth

- DualPrecision effectively shaves long hairs & short stubble
- Super Lift&Cut blades raise hairs to cut closer

Ease of use

- 50 shaving minutes, 1 hour charge
- Washable shaver with QuickRinse system
- Perfect for trimming your sideburns and moustache
- 3 minute quick charge for one shave

Protect your skin

- Glides smoothly over the curves of your face



asimpleswitch.com

Highlights

Aquatec wet & dry



The Aquatec seal on the shaver makes it 100% waterproof. Use it in the shower with your favourite shaving gel or foam for extra skin protection. Naturally, you can also shave dry for convenience. When you are done, simply pop the heads open and rinse under the tap to easily clean your shaver.

Dual Precision Blades




DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble

Super Lift&Cut Action



The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

50+ Shaving Minutes

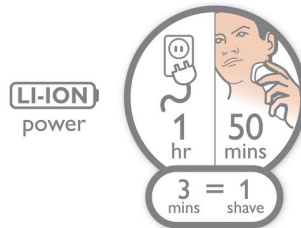

An energy-efficient, powerful lithium-ion battery gives you more shaves per charge. Charge it for an hour, and you'll have up to 50 minutes of shaving time - that's around 17 shaves. Charge it for 3 minutes and you'll have enough power for one shave.

Fully waterproof



With QuickRinse system to clean under the tap and can be used under the shower.

Pop up trimmer



Complete your look by using the pop up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Quick charge for 1 shave



3 minute quick charge provides enough power for one shave, so that you are always fast even when the battery is empty

Skin protection system



Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Accessories

Maintenance: Cleaning brush, Protective cap

Design

Color: Icy silver

Finishing: High gloss front

Handle: Easy grip

Ease of use

Wet & Dry

Cleaning: Fully waterproof, QuickRinse hair chamber

Display: 1 LED indication, Battery full indication, Battery low indication, Charging indication, Quick charge indication

Operation: Rechargeable battery, Cordless use

Display indicates: Battery low, Charging, Battery full, Replace shaving heads

Shaving time: 50+ minutes, up to 17 shaves

Charging time: 1 hour, 3 min quick charge for 1 shave

Power

Automatic voltage: 100-240 V

Battery Type: Lithium-ion

Maximum power consumption: 5.4 W

Stand-by power: < 0.25 W

Service

Replacement head: HQ8 has been replaced by SH50

Guarantee: 2-year guarantee

Replacement heads: Replace every 2 yrs with HQ8

Shaving Performance

Shaving system: DualPrecision heads, Super Lift&Cut

Contour following: Dynamic Contour Response

SkinComfort: AquaTec Wet & Dry, SkinProtection System

Styling: Integrated pop up trimmer

