



Philips
Hair clipper pro

Professional power



QC5345

Professional power

Cuts even the thickest hair

This powerful hair clipper cuts even the thickest hair, thanks to its ultra sharp blades and the most powerful lithium-ion battery on the market. One quick charge provides enough power for 75 minutes of cordless use.

Cuts even the thickest hair

- The most powerful battery on the market

Maximum precision

- Advanced contour-following comb for speed and comfort
- Skin-friendly blades and combs are gentle on skin
- High precision: 20 lock-in precision length settings

Minimum effort

- Adjustable guide combs for extra convenience
- 100% washable for easy cleaning
- Corded and cordless use
- Battery charging, full and low indication
- Self-sharpening blades
- Lubrication for life



PHILIPS

NORELCO


sense and simplicity

Highlights

Maximum power

The lithium-Ion battery is fully charged in one hour and provides constant power for up to 75 minutes of cordless use.

Contour-following comb

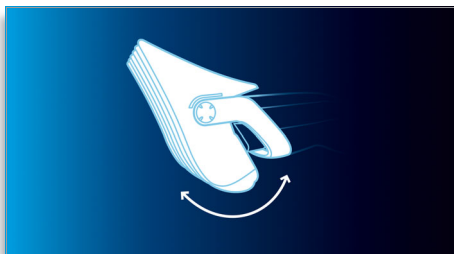


The 2D combs gently follow the contours of your head for a smooth, even and comfortable hair cut.

Skin friendly


The rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable experience.

Adjustable guide combs

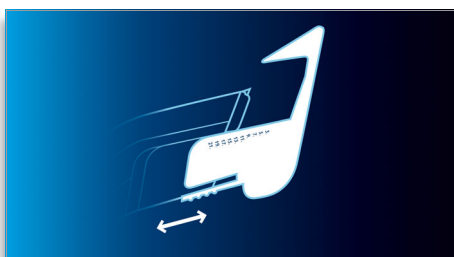


Easily select and set your desired hair length without the hassle of having to change attachments.

100% washable

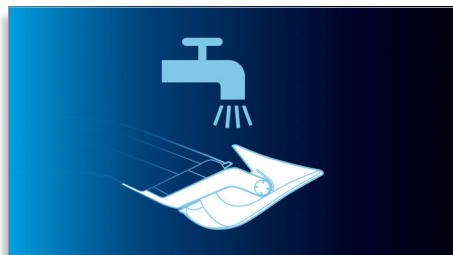


Conveniently washes under the tap for a thorough clean.

Corded and cordless use

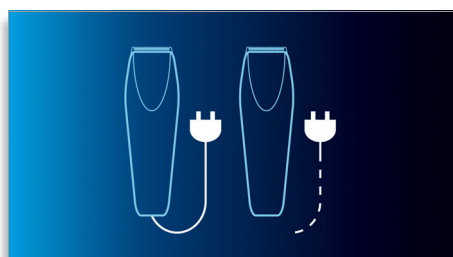


For flexibility and convenience the headroom can be used with or without the power cord.

Battery indicator

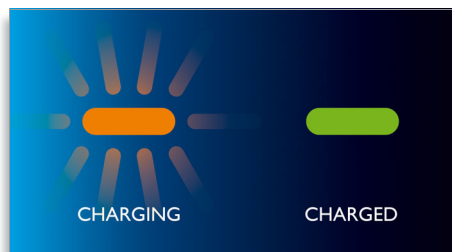

A light display flashes white to indicate that the battery is charging and turns constant when it is fully charged.

Self-sharpening blades

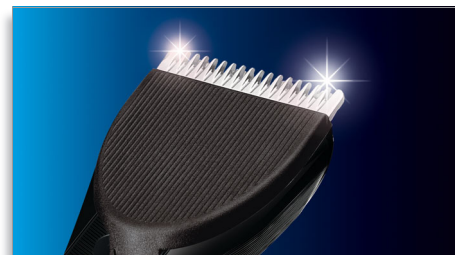

The self-sharpening, stainless steel blades stay sharp longer and ensure top cutting performance.

Lubrication for life



No need for oil maintenance.

Range of 20 length settings

Two combs provide a full range of 20 length settings ranging from 3 to 41 mm with a precision of 2 mm between each step up.

Specifications

Cutting system

- Cutter width: 41 mm
- Number of length settings: 20
- Range of length settings: 3-41 mm
- Precision (size of steps): by 2 mm
- Self-sharpening stainless steel blades
- Maintenance free - No Oil needed

Ease of use

- Display: Charging indicator
- Adjustable guide combs

Power system

- Battery type: Li-Ion

- Charging time: 1 hour
- Running time: 75 minutes

Design

- Finishing: Metal chrome plate
- Shape: Ergonomic
- Easy grip: Side panels

Accessories

- Cleaning brush

Service

- 2-year worldwide guarantee



Issue date 2011-11-29

Version: 12.1.1

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com