

# PHILIPS

## Epilator

### Satinelle

Total body, with shaving head



HP6512



## For skin that is always smooth

### Removes hair for weeks, cares for your skin

Try out epilation with this new Philips epilator system, which removes hairs from the roots, giving you a smooth skin for weeks (not days) and is gentle to your skin. Comes with a unique set of first-time user attachments to achieve the best results

#### Optimal ease of use

- Hair lift & massage attachment
- Shaves, trims and contours sensitive body parts
- Choose the right speed according to your needs
- Fully washable epilation head for better hygiene

#### Skin comfort

- Exfoliate in between epilation sessions
- This epilation system removes hair as short as 0.5 mm
- Sooth your skin with the ice glove for a gentle epilation

# Highlights

## Exfoliation glove




By making circular movements with the exfoliation glove, you gently massage your skin and remove dead skin cells simultaneously. This gives you beautiful smooth skin and will keep ingrown hairs to a minimum

## Hair lift & massage attachment



Lifts even the short hairs for an extra close epilation and relaxes your skin for a gentler hair removal at the same time.

## Hypo-allergenic

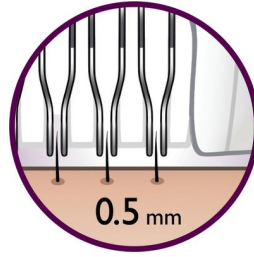


Additionally the hypo-allergenic discs assure an optimal hygiene.

## Ice glove




The ice glove with soothing properties relaxes your skin directly after epilation and minimizes irritation

## Shaving head with bikini trim

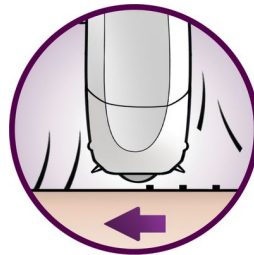


Shaving head attachment perfectly follows contours of your bikini line or underarms for a close and smooth shave. Comes with additional comb to cut longer hairs before epilation or to trim your bikini area.

## Two speed settings

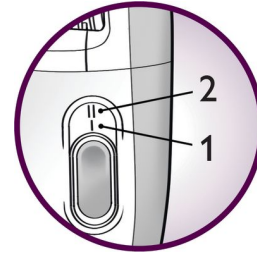

This epilator has two speed settings. Speed 1 for extra gentle epilation and speed 2 for extra efficient epilation

## Washable epilation head

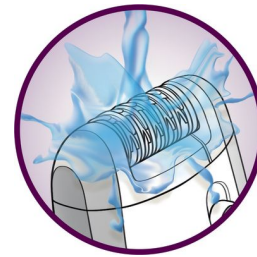

The head can be detached and cleaned under running water for better hygiene

# Specifications

## Accessories

Cleaning brush  
Storage pouch

## Technical specifications

Voltage: 100-240 V  
Power consumption: 7.5 W  
Number of discs: 21

Number of catching points: 20  
Pulling actions/second speed 1: 600  
Pulling actions/second speed 2: 733

## Sound level

Sound level: 72 dBa

