PHILIPS

Hair clipper

Hairclipper series 9000

Self-sharpening metal blades

60 length settings

120mins cordless use/1h charge



HC9420/15



Philips's best

Ultimate power, Perfect haircut.

HAIRCLIPPER Series 9000 gives you total precision and control of your haircut with just one click. With Motorized Combs and a high performance cutting element, it's the only clipper that gives consistently the expected results.

Ultimate precision and control

- · Control buttons
- ${}^{\textstyle \bullet}$ Easy to select and lock-in 60 length settings: 0,5 to 42mm
- · Adjustable hair combs for the best clipping results

Performance

- · Self-sharpening metal blades
- ${\boldsymbol{\cdot}}$ Motorized Combs for easy length selection
- · Auto Turbo to boost cutting speed
- · 2-year guarantee


Easy to use

- · Remembers the last used length setting
- 120 minutes of cordless use after a 1-hour charge

Hair clipper HC9420/15

Highlights

Control buttons

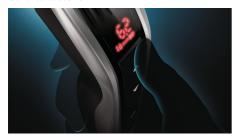

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock-in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

60 lock-in length settings



Use the Control Buttons to precisely select and lock-in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0,2mm increments between 1 and 7mm, and 1mm between 7 and 42mm. Or you can use it without the comb for a close 0.5mm trim.

3 adjustable hair combs



The clipper comes with 3 adjustable hair combs: from 1 to 7mm, 7 to 24mm and 24 to 42mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0,2mm increments between 1 and 7mm, and

1mm between 7 and 42mm. Or you can use the clipper without the comb for a close 0.5mm trim.

Motorized Combs



The motor powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.

Auto Turbo



The Turbo feature automatically boosts the speed when reaching thick hair, allowing you to get a perfect, effortless cut.

Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.

Powerful cordless use



Use the clipper cordless for maximum power and freedom. Its powerful Lithium-Ion battery provides up to 120 minutes of cordless power after 1 hour of charging. Can be used corded and cordless.

2-year worldwide guarantee



All of our grooming products are built to last. They come with a 2-year worldwide guarantee and worldwide voltage compatibility.

Self-sharpening metal blades



Self-sharpening metal blades for long-lasting sharpness

Specifications

Cutting system

Cutter width: 41mm

Cutting element: Stainless steel blades Number of length settings: 60 Precision (size of steps): 0.2mm/1mm Range of length settings: From 0.5 to 42 mm Length selection: Control Buttons, Motorized

Combs

Accessories

Attachments: 3 hair combs Pouch: Travel pouch

Ease of use

Cleaning: Removable cutter

Maintenance free: No oil needed

Memory function

Power system

Motor: Auto Turbo Battery type: Li-ion

Operation: Corded and cordless Running time: 120 minutes Charging time: 1 hour

Service

2-year worldwide guarantee

© 2021 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2021-04-21 Version: 2.4.1

