

PHILIPS

Hair clipper

Hairclipper series 3000

Stainless steel blades

13 length settings

60mins cordless use/8h charge



HC3418/15



HAIRCLIPPER Series 3000 - Cuts twice as fast* with DualCut technology for a faster, sharper cut

The HAIRCLIPPER Series 3000 is built to last, and engineered to perform. The innovative cutting element, stainless steel blades and adjustable hair comb are designed to give you a fast, sharp cut, time after time.

Easy to use

- 'Quick release' blades for easy cleaning
- 60 minutes of cordless use after an 8-hour charge

Performance

- Double-sharpened cutting element with reduced friction
- Self-sharpening steel blades for long-lasting sharpness

Built to last


- 2yr guarantee plus 3yrs when you register the product online
- The blades never need oiling

Precise length control

- Easy to select and lock in 13 length settings: 0.5 to 23mm


Highlights

DualCut Technology

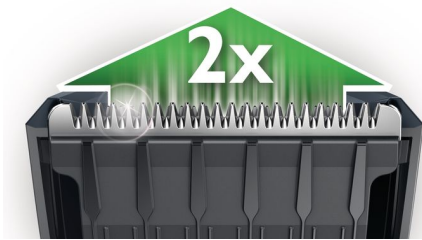

Power through any hair type with our advanced DualCutTechnology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to perform time after time, cutting hair twice as fast as regular Philips clippers.*

Stainless steel blades

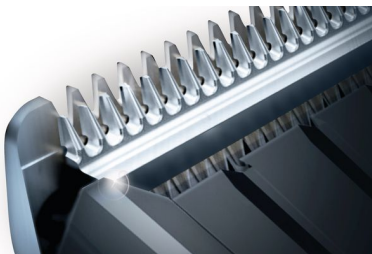

Self-sharpening stainless steel blades for long-lasting sharpness.

13 lock-in length settings



Simply select and lock in the length you want with the adjustable comb which provides 12 lock-in length settings from 1mm to 23mm,

with precisely 2mm between each length. Or you can use it without the comb for a close 0.5mm trim.

Corded & powerful cordless use



Use the clipper corded or cordless for maximum power and freedom, with 60 minutes of cordless power after 8 hours of charging.

Easy to clean



Simply click open the detachable head to quickly release and wash the blades.

5-year worldwide warranty



All of our grooming products are built to last. They come with a worldwide guarantee and worldwide voltage compatibility. Simply

register your clipper on www.philips.com/5years to receive an additional 3 years on top of your standard 2-year Philips guarantee, giving you a 5-year worldwide warranty in total.

No oil needed



No oil needed, for easy maintenance and to save you time.

Specifications

Cutting system

Cutter width: 41 mm

Number of length settings: 13

Precision (size of steps): By 2 mm

Cutting element: Stainless steel blades

Range of length settings: From 0.5 to 23 mm

Ease of use

Maintenance free: No oil needed

Cleaning: Washable blades

Power system

Charging time: 8 hour(s)

Running time: 60 minutes

Battery type: Ni-MH

Operation: Corded and cordless

Service

2-year worldwide guarantee: Yes, Plus 3-years with registration

