

PHILIPS

Dry electric shaver

Shaver series 3000

ComfortCut Blade System

4-direction Flex Heads

Nose trimmer included



S3110/41



Convenient, Easy shave

Comfortably close

The Shaver Series 3000 gives you an easy and convenient shave with more comfort for an affordable price. 4-direction Flex Heads, combined with a ComfortCut Blade System, guarantee a smooth result.

A comfortable shave

- Rounded edges move smoothly over skin for a protective shave

Adjusts to every curve of your face and neck

- Heads flex in 4 directions to easily shave every curve

Easy to use

- Consistent maximum power year after year
- 45 minutes of cordless shaving after an eight-hour charge
- One touch open, for easy cleaning
- Can be used corded and cordless

Fast & comfortable trim

- Advanced guard system prevents pulling, nicks & cuts
- Easily reach hair inside the ear or nose



asimpleswitch.com

Highlights

ComfortCut Blade System



Get a comfortable dry shave. Our ComfortCut Blade System with rounded profile heads glide smoothly across your skin while protecting it from nicks and cuts.

4-direction Flex Heads




Flex heads with 4 independent movements adjust to every curve of your face, giving you an easy shave even on the neck and jaw line.

Li-ion power



Shave longer with every charge. Your shaver will keep going just as strong for years, thanks to our powerful and efficient lithium-ion battery.

45 minutes of cordless shaving

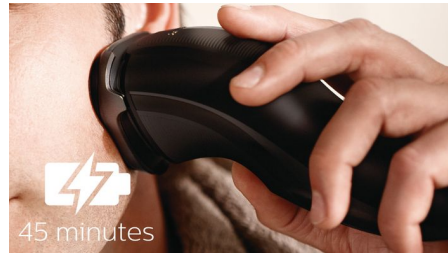

You'll have 45+ minutes of running time – that's about 15 shaves – on an eight-hour charge. Or choose to shave with the device plugged in.

OneTouch Open



Simply pop the heads open, and rinse thoroughly under the tap.

Corded and Cordless use



This shaver is designed to work either plugged in or cordless. Use the cord in order to shave while charging. Or shave cordlessly when the shaver is charged.

ProtecTube technology



With the revolutionary ProtecTube technology, the cutter is protected by an ultra-thin foil guard with rounded tips to prevent skin

irritations. In addition, the cutter is designed to prevent hair from getting caught between two separately moving cutting blades, for guaranteed no pulling.

Ideal angle



The Philips nose trimmer has been engineered so that it is perfectly angled to easily reach hair inside the ear and nose. With the Philips nose trimmer, you can be sure that all unwanted hairs will be removed efficiently.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Shaving Performance

Shaving system: ComfortCut Blade System

Contour following: 4-direction Flex Heads

Accessories

Nose trimmer included

Maintenance: Protective cap

Ease of use

Display: Battery low indicator, Replace shaving heads indicator

Cleaning: Fully washable

Operation: Corded & Cordless use

Design

Handle: Ergonomic grip & handling

Color: Precision black black

Power

Battery Type: Lithium-ion

Run time: 45 min / 15 shaves

Charging: 8 hours full charge

Automatic voltage: 100-240 V

Max power consumption: 9 W

Stand-by power: 0.1 W

Service

2-year guarantee

Replacement head: Replace every 2 yrs with SH30

