

PHILIPS

Epilator, bikini
trimmer

SatinGirl

Total body solution



HP6547/05



The perfect kit for perfectly smooth skin all over Long-lasting smooth skin and bikini styling

It's easy to enjoy fast, long-lasting hair removal. Just use My SatinGirl epilator to get rid of unwanted body hairs. For bikini styling use the compact trimmer included. A quick, simple and safe way to silky-soft skin.

Long-lasting smooth skin

- Compact epilator removes body hairs from the root
- Pulls out even the shortest hairs (0.5mm)

Safely removes hair from the root

- The gentle discs work like tweezers, to softly remove hair

Comfortable and convenient hair removal

- Designed for easy holding & comfortable hair removal
- Washable epilation and trimming heads for extra hygiene
- Cleaning brush included for quick cleaning
- SatinGirl comes with a 2-year guarantee

Bikini styling made easy

- Bikini trimmer for a safe & quick trim


Highlights

Compact epilator



SatinGirl epilator has a broad head so that you can quickly remove body hairs. Its small, rounded shape makes it easy to take it along wherever you want.

Efficient root hair removal

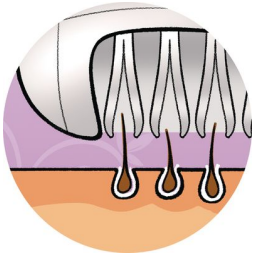

Our epilators have uniquely designed precision discs that gently remove hair from the root, catching even the shortest hairs. This means hairs 4x shorter than with wax (0,5 mm), for up to 4 weeks of hair-free skin.

Gentle tweezing discs

The epilator has gentle rotating discs that work like tweezers, softly removing hairs from the root without pulling the skin.

Ergonomic grip

Both hair removal devices are specially shaped to fit perfectly in your hand, letting you remove hair in a convenient, comfortable way.

Washable epilation head



Both devices have a washable head, which you can take off and clean under running water. This makes hair removal more hygienic.

Cleaning brush

Small cleaning brush to remove loose hairs from the epilator discs.

Bikini trimmer



Trim and style your bikini area. This bikini trimmer features a mini trimming head that evenly trims hairs to 0.5 mm. Can be used in or out of the shower. Easily to carry along as it is battery driven.

2-year guarantee



SatinGirl comes with a 2-year guarantee.

Specifications

Features

Epilator: Gentle tweezing discs, 1 speed setting, Washable epilation head, Ergonomic grip, 2 year guarantee

Bikini trimmer: Mini trimming head, Wet & Dry use

Accessories

Cleaning brush

Technical Data (Epilator)

Number of catching points: 20

Number of discs: 21

Pulling actions/sec. speed 1: 600

Voltage adapter: 13V

Voltage device: 13V/400mA

