

# PHILIPS

do it yourself hair  
clipper

180° rotating head

corded & cordless



QC5530



## Cut your own hair

Even in hard-to-reach-areas

A perfectly smooth and precisely shaved head with the Philips do-it-yourself Headgroom

### **Shave or trim. Perfect results without help.**


- 180° rotating head for 100% reach
- Precision trimmer attachment for finishing and side burns
- Quick Charge Power System: 1hr/60 minutes cordless use
- Fully washable for easy cleaning
- Includes a hand-held mirror for full visibility
- A wide range of length settings from 1 to 30mm
- Adjustable zoom ring for easy length settings
- Contour-following combs for speed and comfort
- Skin-friendly blades and combs are gentle to the skin
- Corded and cordless use
- Battery charging, full and low indication
- Self-sharpening blades
- Lubrication for life

# Highlights

## 180° rotating head

Makes trimming or shaving your own head easier than ever. Simply select the right angle to comfortably reach all parts of your head without help.

## Precision trimmer

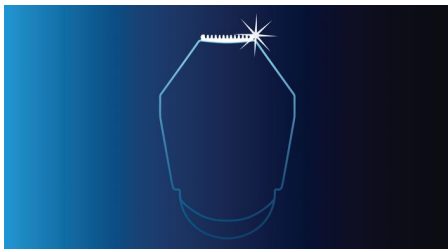

Use the precision trimmer to neatly trim side burns and hair line for a sharp finish.

## Quick charge battery



The lithium-Ion battery is fully charged in 1 hour and provides constant power for up to 60 minutes cordless use.

## 100% Washable


Conveniently washes under the tap for a thorough clean.

## Includes hand-held mirror




The hand-held mirror provides extra visibility when cutting the hair at the back of your head.

## Length settings from 1-30mm

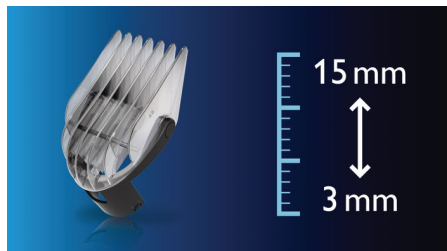


Cut your own hair easily and accurately, using the precision comb for lengths between 1 and 3mm, the regular comb for 3 to 15mm or the big comb for 15 to 30mm.

## Adjustable zoom ring

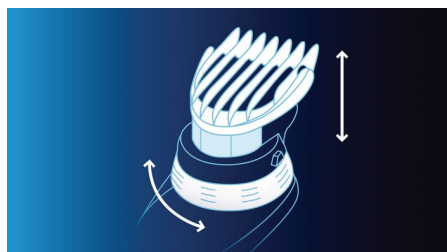


Easily select and set your desired hair length by turning the integrated zoom ring. The length settings are clearly visible on the side of the combs.

## 2D Contour-following comb

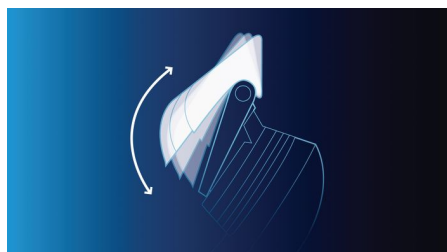


The 2D combs gently follow the contours of your head for a smooth, even and comfortable hair cut.

## Skin-friendly

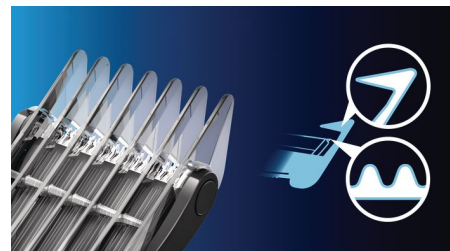

Rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable experience.

## Corded and cordless use

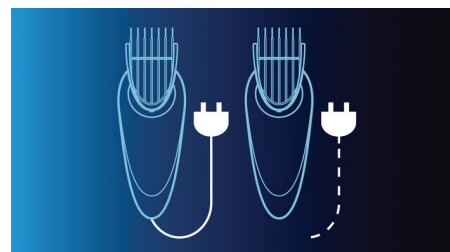

For flexibility and convenience the headgroom can be used with or without the power cord.

## Battery indicator



A light display flashes white to indicate that the battery is charging and turns constant when it is fully charged. The light flashes orange when the battery is running low.

# Specifications

## Cutting system

Cutter width: 41 mm

Number of length settings: 18

Range of length settings: from 1 to 30 mm

Precision (size of steps): by 2 mm

Cutting element: Stainless steel blades

Comb type: Contour following

Big comb (15 to 30 mm)

Small comb (3 to 15 mm)

Precision comb (1 to 3 mm)

Precision trimmer

## Ease of use

Zoomring

Maintenance free – No Oil need

Display: Charging indicator

Cleans under the tap

Adjustable guide combs

## Power system

Battery type: Li-ion

Charging time: 1 hour

Running time: 60 minutes

Usage: Corded/cordless

## Design

Shape: Ergonomic

## Accessories

Cleaning brush

Precision trimmer

Mirror

3 guide combs

## Service

2-year worldwide guarantee

