



Philips Saeco Xelsis
Super-automatic
espresso machine

- Xelsis
- Integrated milk jug and frother
- Stainless Steel



HD8944/13

Love your own favourite coffee speciality

Multi beverage, Multi user

With the Xelsis each and every family member can enjoy his or her favourite coffee speciality. Thanks to the unique multi-user function up to 6 personal user profiles can be created and for each profile up to 9 beverages can be personalised.

Multi-user and Multi-beverage

- 6 unique user profiles for 9 beverages
- Perfect milk froth thanks to the integrated milk carafe

Easy to clean and maintain

- Always a clean machine thanks to auto-clean and descaling

Bean- to-cup customisation

- Boost coffee crema and body
- Patented intelligent adjustable milk froth
- Full bean-to-cup customisation

Easy to use

- Ergonomic in day to day operation

Easy to use

- Dynamic multi-media user interface

 **Saeco**

Highlights

Crema and body boost



This Saeco features our patented crema and body boost. This dial, conveniently located at your machine's spout, allows you to smoothly adjust the counter pressure, changing your espresso's body and crema. Try it yourself and find your favourite taste.

6 users x 9 beverages



With this coffee machine up to 9 coffee specialities can be personalised by 6 different users – every family member gets his or her own favourite customised speciality with just one touch

Adjustable milk froth




Only the Saeco coffee machine offers an intelligent milk froth adjustment system. Simply select the level of froth you'd like via the beverage menu.

Auto-cleaning and descaling



Saeco designed this espresso machine to automatically clean its coffee circuit with water when starting up or switching off to deliver a great, fresh taste with each cup of coffee. Regular descaling prolongs your espresso machine's life. This machine will not only prompt when descaling is needed, the automated descaling process will start and guide you with clear on-screen messages when you have to intervene. Descaling has never been so easy!

Multi-media user interface

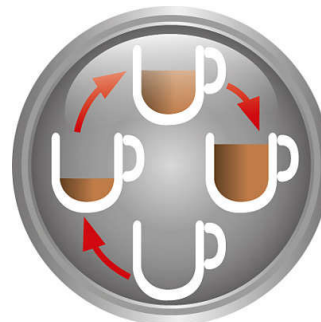

The wide colour TFT screen allows colourful and dynamic pictures to always know exactly what the coffee machine is doing or what it needs

Removable brewing group



The brewing group is at the heart of every fully automatic coffee machine and it should always be kept clean. A task that doesn't get any more convenient than with a Saeco: remove, rinse and re-insert — finished.

Full customisation



Everything just the way you like it: With this coffee machine you can choose your favourite coffee blend and adjust coffee length, intensity, temperature, crema and body structure until they all meet your personal taste perfectly.

Specifications

Easy to use

- Usage: Adjustable coffee dispenser, Bypass for grinded coffee, Cup-holding surface, Frontal access to all functions, Instant steam (2 boilers), Removable brewing group, Removable water tank
- Cleaning and maintenance: Automatic coffee circuit rinse, Automatic milk circuit rinse, Descaling cycle

Weight and dimensions

- Coffee bean capacity: 350 g
- Product dimensions (L x D x H): 280 x 370 x 420 mm
- Product weight: 16.1 kg
- Waste container capacity: 14 serv
- Maximum cup height: 150 mm
- Milk carafe capacity: 0.5 L
- Water tank capacity: 1.6 L

Technical specifications

- Boiler material: Inox
- Supported coffee types: Ground coffee, Whole coffee beans

- Voltage: 240 V
- Power: 1500 W
- Country of origin: Designed in Italy, Made in Italy
- Frequency: 50 Hz
- Water pressure in pump: 15 bar (perfect espresso)
- Pump pressure: 15
- Number of water boilers: 2 boilers (instant steam)

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing, SBS: creme adaptor, Cup warmer

Multi-Beverage

- Milk Variations: Frothing degree adaptor, Integrated auto milk function, Milk quantity selector, Removable milk carafe

Service

- 2-year worldwide guarantee

Sustainability

- Automatic Standby Option



Issue date 2022-06-21

Version: 1.1.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com