

Philips 9000 series  
Pressurised steam  
generator

Auto Calc-Clean

GC9020



# Powerful and hassle-free ironing

## Unique Auto Calc-Clean function

This fast and powerful ironing system removes hassle with the unique Auto Calc-Clean function. Removing scale from the system is something you no longer have to do; it is done for you. Giving you a superb, hassle-free ironing experience

### **Fast and powerful ironing**

- Continuous steam up to 120 g/min
- Up to 5 bar pressure
- SteamGlide soleplate is Philips premium soleplate

### **Comfortable ironing**

- Ergonomic and lightweight 1.2 kg iron

### **Safe ironing**

- System shuts-off automatically when iron is left unattended

### **Easy set-up and storage**

- Lock your iron securely to the base station
- Easy one touch cord storage — just press the button

### **Hassle-free scale removal**

- Removes scale from your system automatically

# PHILIPS

# Highlights

## Up to 5 bar pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

## Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.


## Safety carry lock



Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the

base, making it safer and reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

## Ergonomic iron

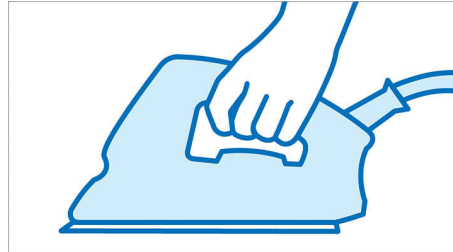

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

## SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

## Auto Calc-Clean function



The Auto Calc-Clean function automatically cleans your ironing system of scale. A two-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

## Automatic cord winder



Thanks to the automatic cord winder, you can just press the button to automatically retract the power cord.

## Automatic safety shut-off



For your safety, the automatic safety shut-off switches the ironing system off when it is left unattended. The ironing system can be reactivated by pressing any button.



# Specifications

## Calc management

- Suitable for tap water
- Calc clean reminder

## Accessories

- Heat-resistant iron mat

## Technical specifications

- Weight of iron + base: 6.6 kg
- Voltage: 220 - 240 V
- Product dimensions: 44.5 x 24.5 x 32.6 cm
- Weight of iron: 1.1 kg

## Easy to use

- Water tank capacity: 1000 ml + rinse tank 500 ml
- Refill any time
- Filling and emptying water: Detachable water tank, Extra-large filling hole

- Heat-up time: 2 min
- Safety auto off
- Soft grip
- Storage solution: Carry lock
- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Hose length: 1.9 m

## Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 120 g/min
- Power: 1800 - 2200 W
- Steam output
- Pressure: Up to 5
- Vertical steaming
- Variable steam settings
- Steam tip



Issue date 2023-10-10

Version: 1.0.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)