

PHILIPS

Wet & Dry electric shaver

Shaver series 9000

Pressure Guard sensor

Dual SteelPrecision blades*

Protective SkinGlide coating

Power Adapt sensor



S9932/20



Superior closeness^{**}. Customized to your skin SkinIQ technology senses, guides, and adapts

The most intelligent shaver powered by artificial intelligence, gives you feedback on shaving pressure to protect your skin, while giving you a superior close shave. It senses, guides, and adapts to you, for a personalized shave.

A close shave

- Advanced precision for a close shave
- Adjusts to your facial contour for optimal skin contact

SkinIQ technology

- Helps you to shave with optimal pressure
- Smooth gliding for better skin protection
- Adjusts to your beard for effortless shaving
- Guides you to an improved technique with fewer passes
- Enhanced shaving experience with app

For a convenient shave


- Choose a convenient dry or refreshing wet shave
- Even-up your mustache and sideburns
- 60 minutes of shaving from a 1-hour charge
- OLED display for dynamic SkinIQ and shaver notifications

Highlights

Pressure Guard sensor

Using the right pressure is key for closeness and skin protection. Advanced sensors in the shaver read the pressure you apply, and the innovative light signal shows when you are pressing too hard or too little. For a personalized shave that is just right for you.

Dual SteelPrecision blades*

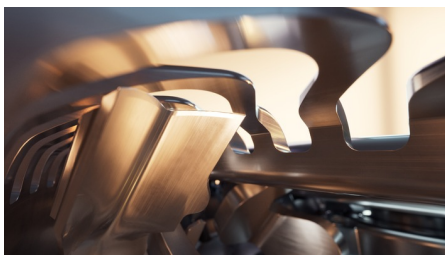

With up to 150.000 cutting actions per minute, the Dual SteelPrecision blades* shave close. The 72 high-performance blades are self-sharpening and made in Europe.

Protective SkinGlide coating



A protective coating lies between the shaver heads and your skin. Made of up to 2.000 micro-tech beads per square millimeter, the coating reduced friction on skin by 25%***, to minimize irritation.

Power Adapt sensor


The intelligent facial-hair sensor reads hair density 500 times per second. The technology auto-adapts cutting power for an effortless and gentle shave.

Motion Control sensor




Motion-sensing technology tracks how you shave and guides you to a more efficient technique. After just three shaves, the majority of men achieved a better shaving technique for fewer passes****.

360-D Flexing heads

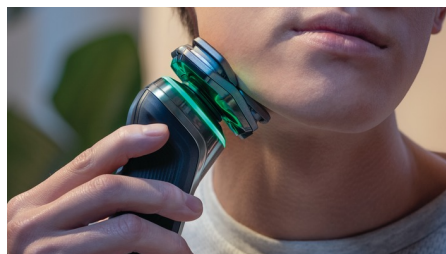


Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and comfortable shave.

Personalization via app

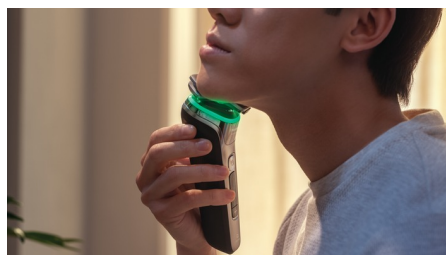

Perfect your shave by pairing your shaver with the Philips Home+ app. Shave by shave, track the progress of your skin, personalize your shave and master your technique for a shave that's as close as it is kind to skin.

Pop-up trimmer

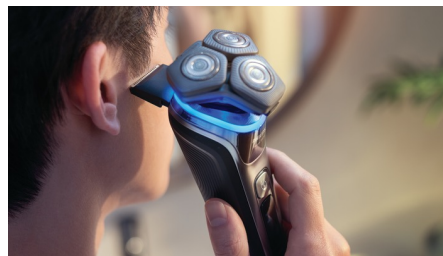

Refine and define your mustache and sideburns with the pop-up trimmer—and complete your look with ease.

Shave wet or dry



A wet and dry shaver that adapts to your preference. Choose a convenient dry shave, or pair with your favourite foam or gel for a refreshing wet shave.

60 minutes of cordless shaving



A shaver for at home or on-the-go. Get 60 minutes of shaving time from a 1-hour charge, or plug it in for instant and continuous power.

Specifications

Shaving Performance

Shaving system: Dual SteelPrecision blades*

Contour following: 360-D Flexing heads

SkinIQ technology: Power Adapt sensor, Protective SkinGlide coating, Motion Control sensor, Pressure Guard sensor

Ease of use

Wet & Dry: Wet and dry use

Display: Advanced OLED display, Pressure guidance, Motion control indicator, Battery level indicator, Travel lock

Cleaning: One-touch open, Fully washable

Power

Run time: 60 minutes

Charging: 1 hour full charge, 5 min quick charge

Automatic voltage: 100-240 V

Stand-by power: 0.04 W

Max power consumption: 9 W

Battery type: Li-ion

Design

Handle: Rubber grip

Color(s): Ice Blue

Shaving heads: Angular

Software

App: Philips Home+, Connects via Bluetooth®

Smartphone compatibility: iPhone and Android™ devices

Software update: Philips offers relevant software updates for a period of 2 years after the date of purchase

Service

2-year warranty

Replacement head SH91: Replace every 2 yrs with SH91

Accessories

Integrated pop-up trimmer

