




Philips Saeco Xelsis  
Super-automatic  
espresso machine

- Xelsis
- Digital ID
- Mirror steel

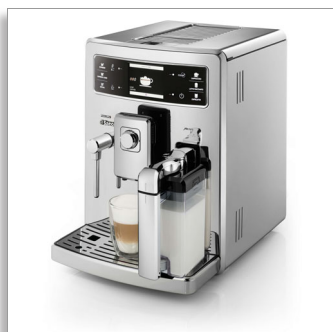

HD8946/02

## Love your own favourite coffee speciality

### Multi beverage, Multi user

With the Xelsis each and every family member can enjoy his or her favourite coffee speciality. Thanks to the unique multi-user function up to 6 personal user profiles can be created and for each profile up to 9 beverages can be personalised.

#### Multi-user and Multi-beverage

- Fingerprint user recognition
- 6 unique user profiles for 9 beverages
- Perfect milk froth thanks to the integrated milk carafe

#### Easy to clean and maintain

- Always a clean machine thanks to auto-clean and descaling

#### Bean- to-cup customisation

- Boost coffee crema and body
- Patented intelligent adjustable milk froth
- Full bean-to-cup customisation

#### Easy to use

- Ergonomic in day to day operation

#### Easy to use

- Dynamic multi-media user interface

 **Saeco**

# Highlights

## Digital ID




You can immediately and easily select your own personal profile via the fingerprint recognition device.

## Adjustable milk froth



Only the Saeco coffee machine offers an intelligent milk froth adjustment system. Simply select the level of froth you'd like via the beverage menu.

## Multi-media user interface

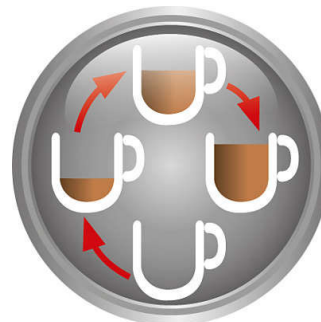

The wide colour TFT screen allows colourful and dynamic pictures to always know exactly what the coffee machine is doing or what it needs

## Crema and body boost



This Saeco features our patented crema and body boost. This dial, conveniently located at your machine's spout, allows you to smoothly adjust the counter pressure, changing your espresso's body and crema. Try it yourself and find your favourite taste.

## Auto-cleaning and descaling



Saeco designed this espresso machine to automatically clean its coffee circuit with water when starting up or switching off to deliver a great, fresh taste with each cup of coffee. Regular descaling prolongs your espresso machine's life. This machine will not only prompt when descaling is needed, the automated descaling process will start and guide you with clear on-screen messages when you have to intervene. Descaling has never been so easy!

## Removable brewing group



The brewing group is at the heart of every fully automatic coffee machine and it should always be kept clean. A task that doesn't get any more convenient than with a Saeco: remove, rinse and re-insert — finished.

## 6 users x 9 beverages



With this coffee machine up to 9 coffee specialities can be personalised by 6 different users – every family member gets his or her own favourite customised speciality with just one touch

## Full customisation



Everything just the way you like it: With this coffee machine you can choose your favourite coffee blend and adjust coffee length, intensity, temperature, crema and body structure until they all meet your personal taste perfectly.

# Specifications

## Easy to use

- Usage: Adjustable coffee dispenser, Bypass for grinded coffee, Cup-holding surface, Frontal access to all functions, Instant steam (2 boilers), Removable brewing group, Removable water tank
- Cleaning and maintenance: Automatic coffee circuit rinse, Automatic milk circuit rinse, Descaling cycle

## Weight and dimensions

- Coffee bean capacity: 350 g
- Product dimensions (L x D x H): 280 x 370 x 420 mm
- Waste container capacity: 14 serv
- Weight: 16.1 kg
- Milk carafe capacity: 0.5 L
- Water tank capacity: 1.6 L

## Technical specifications

- Boiler material: Stainless steel (Inox)

## Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing, SBS: creme adaptor, Cup warmer

## Multi-Beverage

- Milk Variations: Frothing degree adaptor, Integrated auto milk function, Milk quantity selector, Removable milk carafe

## Technical data

- Power: 1500 W
- Voltage: 230 V
- Pump Pressure: 15 bar
- Frequency: 50 Hz

## Sustainability

- Automatic Standby Option



Issue date 2022-06-23

Version: 1.0.1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)