



Philips MiniVac
Handheld vacuum cleaner

10.8-V battery (Lithium)

Bagless Cyclonic
Crevice and brush tool

FC6146/01

Powerful MiniVac for a better cleaning result

Bagless cyclonic airflow and aerodynamic nozzle

Enjoy a better cleaning result with the powerful Philips MiniVac Lithium 10.8 V. The bagless cyclonic airflow and 2-stage filtration system guarantee lasting performance, while the aerodynamic nozzle design ensures superior dust pick-up.

Easy to use

- One-step click-off nozzle for easy emptying

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration

Environmentally friendly

- Green Lithium-Ion technology

Superior cleaning results

- Aerodynamic nozzle design for a better dust pick-up


Guaranteed

- Quick charge in 8 hours
- Longer-lasting lightweight Lithium-Ion batteries

PHILIPS

Highlights

Green Lithium-Ion technology

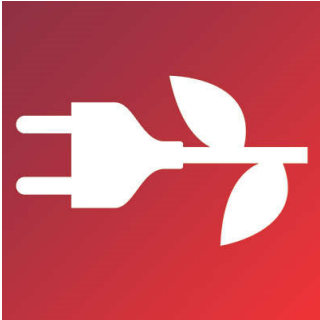

Lithium-Ion batteries are really green batteries. They do not have toxic elements, which makes them better for the environment. Furthermore, they do not discharge when the product is not in use and they guarantee a very low standby power. Therefore, they are also energy saving.

2-stage bagless cyclonic



The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

Aerodynamic nozzle design



The aerodynamic nozzle design of the Philips MiniVac is created to ensure optimum dust pick-up of even the finest dust particles. The ergonomic

shape of the nozzle helps you to clean even the most hard-to-reach areas.

Longer-lasting lightweight Lithium-Ion batteries




The powerful Lithium-Ion (Li-Ion) batteries of the Philips Mini Vac have longer-lasting power versus standard Nickel-Cadmium (NiCd) batteries. Li-Ion batteries are also very lightweight, giving you a more enjoyable cleaning experience.

One-step click-off nozzle



The Philips MiniVac vacuum cleaner is easy and quick to empty and hygienic to clean. The Philips MiniVac has a nozzle that easily clicks off in just one step, so you can empty the Mini Vac without touching the dirt.

Quick charge in 8 hours

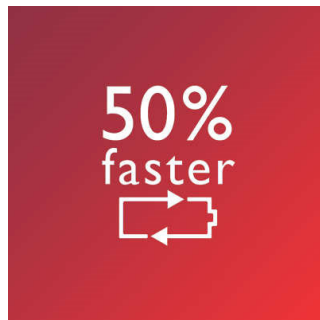

The Lithium batteries charge an empty battery in only 8 hours, twice as fast as in ordinary chargers.

Specifications

Weight and dimensions

- Appliances per A-box: 6
- Dimensions of packaging (L x W x H): 460 x 160 x 160 mm
- Weight of product: 0.8 kg
- Dimensions of A-box (L x W x H): 508 x 335 x 490 mm

Performance

- Battery type: Li-Ion
- Battery voltage: 10.8 V
- Charging time: 8 hour(s)
- Runtime: 9 min
- Vacuum (max): 4.3 kPa
- Input power (max): 100 W
- Suction power (max): 22 W
- Noise level (Lc IEC): 81 dB
- Airflow (max): 950 l/min

Design

- Design features: Translucent dust chamber
- Colour: Black/stainless steel/red accents

Usability

- Special features: Charging indication, Soft touch handle

Nozzles and accessories

- Other accessories: Charging base

Filtration

- Dust capacity: 0.5 L
- Filter system: 2-stage cyclonic action



Issue date 2023-04-13

Version: 2.2.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com