

Philips Steam&Go
Handheld garment steamer

1000 W

Steam-on-demand
Brush

GC310/07



Quick crease removal at the touch of your hand

This handheld garment steamer is ideal for last moment touch-ups and difficult to iron clothes. Easy to use and quick, it is the perfect addition to your iron.

Easy to use

- Ergonomic design for handheld operation
- No ironing board needed
- Detachable water tank for easier filling
- Safe to use on delicate fabrics, like silk

Quick crease removal

- Automatic continuous steam delivered by electric pump
- Fast heat up time
- Brush accessory for a smooth finish

Refreshes clothes without washing or dry cleaning

- Removes cigarette, food and body odors
- Steam kills up to 99.9% of bacteria*

PHILIPS

Highlights

No ironing board needed




By using the steamer you do not need an ironing board anymore, which makes ironing hassle-free.

Automatic continuous steam




Electric pump provides continuous steam for easy and quick crease removal.

Detachable water tank

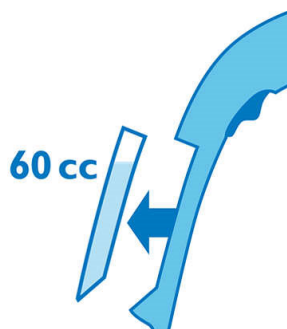


Detachable water tank for easier filling.

Ergonomic design

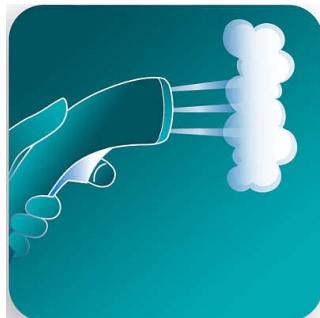

The handheld steamer is light and comfortable to use thanks to the ergonomic and compact design. Just press the trigger and quickly remove creases with continuous steam.

Fast heat up time

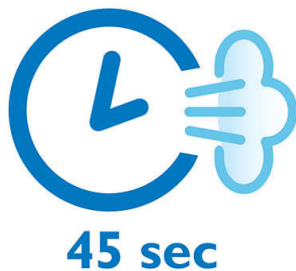


The steamer is ready to use within seconds.

Safe on all garments



The steamer is safe to use on all fabrics. It is a great solution for delicate fabrics like silk.

Brush accessory

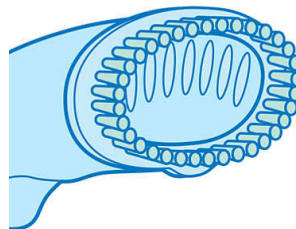

Use the brush accessory with thicker garments like coats for better steam penetration and a smoother finish.

Steam kills bacteria



Hot steam kills up to 99.9% of bacteria on clothes and helps delaying washing or dry cleaning*.

Removes unwanted odors



Powerful steam removes cigarette, food and body odors.

Specifications

Easy to use

- Water tank capacity: 60 ml
- Heat up time: less than 1 minute(s)
- Safe for all fabrics: Even for delicates like silks
- Power cord length: 2 m

Fast & powerful crease removal

- Continuous steam output: up to 20 g/min
- Power: 840 W
- Steam output

Technical specifications

- Packaging dimensions: 38 x 12 x 15 cm
- Product dimensions: 34.7 x 12.9 x 12.2 cm
- Voltage: 220 V
- Weight of product: 0.660 kg
- Weight of product with package: 0.890 kg

Accessories

- Brush

Calc management

- Suitable for tap water



Issue date 2022-05-02

Version: 1.1.1

EAN: 08 71010 37451 43

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* * Tested by external body for bacteria types Escherichia coli 8099,
Staphylococcus aureus ATCC 6538, Candida albicans ATCC
10231 with 8 minutes steaming time.