




Philips Saeco Intelia
Super-automatic
espresso machine

- Automatic Milk Frother
- Silver

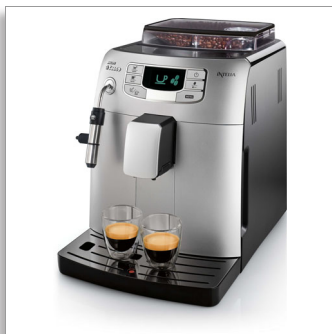

HD8752/23

One touch espresso and milk froth

With Saeco's ultimate cappuccinatore

Only the Saeco Intelia super-automatic espresso machine offers you the perfect Espresso experience, easy to use, easy to customize, easy to clean. Prepare a tasty Espresso or creamy milk froth with just a touch of a button.

Authentic Italian coffee perfection

- Coffee without burnt taste thanks to 100% ceramic grinders
- Delicious milk froth thanks to the automatic milk frother
- Coffee without waiting thanks to the quick heat boiler

Ease of cleaning and maintaining

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group


Ease of cleaning and maintaining

- Easy cleaning thanks to dishwasher-safe parts

Set the beverages to suit your taste

- Save your favorite coffee settings
- Avoid heat loss and fit every cup with our adjustable spout
- Play with the coffee's richness with our adjustable grinders

 **Saeco**



Highlights

100% ceramic grinders



This espresso machine is equipped 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean for an impeccable espresso. Ceramic also ensures long-lasting performance and a totally silent operation.

Quick heat boiler



The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Saves your coffee settings



You will always get a perfect cup of espresso brewed just for you, according to your

personal preference, thanks to our innovative memo function to adjust the coffee length, strength and temperature. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevents the coffee splashing or cooling down while pouring in your cup. This way your espresso is always served at the right temperature while maintaining a clean machine.

Dishwasher-safe parts




For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter coffee.

Removable brewing group

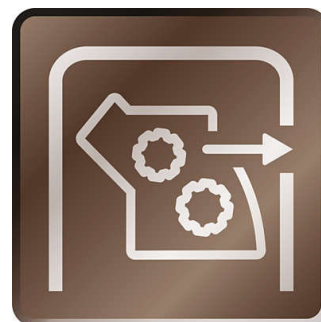

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easily cleaning by rinsing under the tap ensuring maximum hygiene.

Specifications

Easy to use

- Cleaning and maintenance: Automatic coffee circuit rinse, Descaling cycle
- Usage: Adjustable coffee dispenser, Cup holding surface, Rapid steam, Removable brewing group, Normal / long espresso option

Weight and dimensions

- Product dimensions (L x D x H): 256 x 340 x 440 mm
- Coffee bean capacity: 300 g
- Waste container capacity: 10 servings
- Product weight: 8.9 kg
- Maximum cup height: 130 mm
- Water tank capacity: 1.5 L

Technical specifications

- Cord length: 80 cm
- Supported coffee types: Ground coffee, Whole coffee beans
- Power: 1900 W
- Boiler material: Stainless steel (Inox)
- Country of origin: Designed in Italy, Made in

Europe

- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Features

- Cappuccinatore
- Brita Filter compatible: Optionable
- Simultaneous brewing

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Design

- Colour: Silver/Black
- Materials and finishing: Plastic

Service

- 2-year worldwide guarantee

Sustainability

- Automatic Stand-by Option



Issue date 2022-05-02

Version: 1.1.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com