

Philips 9000 series
Pressurised steam
generator

Auto Calc-Clean

GC9040



Powerful and hassle-free ironing

Unique Auto Calc-Clean function

This fast and powerful ironing system removes hassle with the unique Auto Calc-Clean function. Removing scale from the system is something you no longer have to do; it is done for you. Giving you a superb, hassle-free ironing experience

Fast and powerful ironing

- Continuous steam up to 120 g/min
- Up to 5 bar pressure
- SteamGlide soleplate is Philips premium soleplate

Comfortable ironing

- Ergonomic and lightweight 1.2 kg iron

Safe ironing

- System shuts-off automatically when iron is left unattended

Easy set-up and storage

- Lock your iron securely to the base station
- Easy one touch cord storage — just press the button

Hassle-free scale removal

- Removes scale from your system automatically

PHILIPS

Highlights

Up to 5 bar pressure

5 bar

The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.


Safety carry lock



Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the

base, making it safer and reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

Ergonomic iron

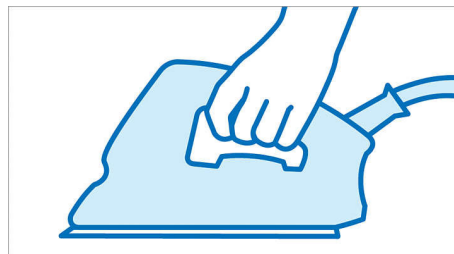

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Auto Calc-Clean function




The Auto Calc-Clean function automatically cleans your ironing system of scale. A two-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

Automatic cord winder



Thanks to the automatic cord winder, you can just press the button to automatically retract the power cord.

Automatic safety shut-off

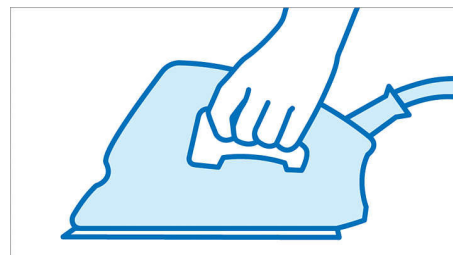

For your safety, the automatic safety shut-off switches the ironing system off when it is left unattended. The ironing system can be reactivated by pressing any button.



Specifications

Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 120 g/min
- Power: 1800 - 2200 W
- Steam output
- Pressure: Up to 5
- Vertical steaming
- Steam boost: 170 g
- Variable steam settings
- Steam tip

Easy to use

- Refill any time
- Water tank capacity: 1000 ml + rinse tank 500 ml
- Heat-up time: 2 min
- Filling and emptying water: Detachable water tank, Extra-large filling hole
- Safety auto off

- Soft grip
- Storage solution: Carry lock
- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Hose length: 1.9 m

Technical specifications

- Weight of iron + base: 6.6 kg
- Voltage: 220 - 240 V
- Product dimensions: 44.5 x 24.5 x 32.6 cm
- Weight of iron: 1.1 kg

Accessories

- Heat-resistant iron mat

Limescale management

- Suitable for tap water
- Calc clean reminder



Issue date 2022-06-21

Version: 1.0.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com