

Philips PowerPro  
Bagless vacuum cleaner

**2100W**  
PowerCyclone 5  
HEPA 12 filter  
Parquet

**FC8766/61**



## 40% more dust pick-up for a better clean

With PowerCyclone technology and AeroSeal nozzle

The new Philips PowerPro FC8766 bagless vacuum cleaner picks up more dust in one go, so your floor gets cleaner with fewer strokes. You can therefore spend more time doing the things you really enjoy.

### **Easy to clean**

- Advanced dust container design for hygienic emptying

### **Extra long reach for convenient cleaning**

- More cleaning with less effort

### **More dust pick-up for faster cleaning**

- Powerful 2100 Watt motor for excellent cleaning results
- AeroSeal nozzle captures more dust and fluff per stroke
- PowerCyclone technology separates dust and air in one go

**PHILIPS**

## Highlights

### PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

### 2100 Watt motor



This powerful 2100 Watt motor generates max. 370 Watt suction power for excellent cleaning results.

### AeroSeal nozzle



The AeroSeal nozzle captures more dust and fluff per stroke thanks to the special designed soleplate.


It gently opens up the carpet to remove the dust deep down. Thanks to the optimal sealing the dust is transported into the cyclone with maximum airflow.

### Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

### 10 m action radius

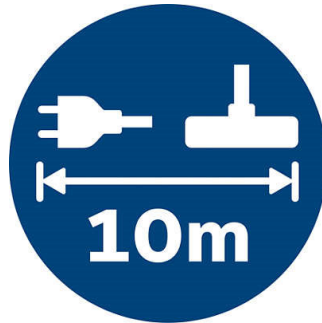

10 m action radius for cleaning with less effort.

## Specifications

### Performance

- Input power (IEC): 1800 W
- Input power (max): 2100 W
- Noise level (Lc IEC): 80 dB
- Suction power (max): 370 W
- Vacuum (max): 34 kPa
- Airflow (max): 38 l/s

### Design

- Color: Metallic titanium

### Usability

- Tube coupling: Easy release
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

### Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle, Brush
- Standard nozzle: AeroSeal nozzle
- Accessory storage: On tubeclip
- Additional nozzle: Super Parquet nozzle

### Weight and dimensions

- Dimensions of product (LxWxH): 440 x 300 x 290 mm
- Weight of product: 5.5 kg

### Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

### Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Motor filter: Double layer
- HEPA Air Seal



Issue date 2023-04-14

Version: 1.1.1

EAN: 87 10103 61466 1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\*\* Dust pick-up results compared to the top selling bagless vacuum cleaner in Europe, tested on average by external test institute according to DIN EN 60312/11/2008 on carpet, October 2011