

PHILIPS

Vacuum stubble
and beard trimmer

Beardtrimmer series
7000

1mm precision settings

Multifunctional display

75mins cordless use/1h charge

Turbo power boost button



BT7085/32



Perfect Beard, less mess with new Vacuum System

This powerful stubble and beard trimmer delivers superior trimming performance. The stubble comb has been specially designed to create the perfect stubble you want. The integrated vacuum system captures hairs for less mess guaranteed.

Best performance that feels great

- Contour following comb for a precise and even trim
- Stubble comb designed to trim with more precision

Brings maximum ease of use

- Multifunctional display
- Travel Lock
- Vacuum system captures cut hairs for mess-free trimming
- 2-year guarantee, worldwide voltage

Create the look you want

- 18 secured length settings from 1mm up to 18mm

Provides optimal power

- Corded and cordless use for maximum power and freedom
- Strong lithium-ion battery for optimal power use
- Turbo power boost button boosts cutting and fan speed



asimpleswitch.com

Highlights

Contour following comb



Flexing guide comb that follows every curve of your face for getting an even trim in an easy and comfortable way.

Multifunctional display



Multifunctional display shows easily the length setting

Travel lock




Travel lock option protects your product against unintentionally switching on when you are carrying it in your bag.

Integrated vacuum system



The integrated vacuum mechanism absorbs cut-off hairs during use and gives you a cleaner washbasin after use.

18 secured length settings

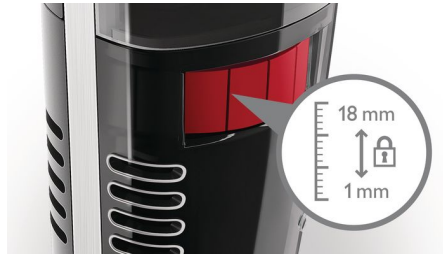


Select and locks your desired length within a versatile range of possible lengths.

Stubble comb



The stubble comb has been designed for giving more sight while you are trimming as there are no frontal teeth. Moreover, by applying the tip of the trimmer fine contours are possible, by applying the trimmer at different angle on the skin you get more control on individual hair length. This comb is ideal for a perfect stubble or a 5 o'clock shadow where every detail counts.

Corded and cordless use

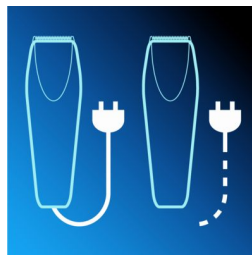

Use your Philips trimmer corded or cordless with the recharged battery for maximum power and freedom.

Powerful Lithium-Ion battery



This product has a powerful lithium-ion battery with quick charge so you can charge the product in only 1 hour for 75 minutes use.

Turbo power boost button



When greater suction power and increased cutting speed is desired while trimming, simply press the Turbo Power Button.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Power system

Quick charge: 1 hour(s)
Usage: Corded/cordless
Running time: 75 minutes
Battery type: Lithium-Ion

Accessories

Cleaning brush

Cutting system

Cutter width: 32 mm
Self-sharpening stainless steel blades
Number of length settings: 18
Precision (size of steps): by 1 mm

Comb type: Contour following

Cutting element: Stainless steel blades
Non-scratching teeth: For more comfort
Range of length settings: 1 up to 18 mm

Design

Finishing: White side panels
Soft touch handle

Ease of use

Storage: Travel pouch
Multifunctional display: Battery indication,
Charging indication, Length setting indication
Secured length settings

Vacuum system: For hair collection

Zoomring: Easily adjust length settings
Maintenance free: No oil needed

Create the look you want

Styles: Short beard, Sideburns, Stubble look

Performance

Trimming performance: Turbo power boost
button

Service

2-year worldwide guarantee

