

PHILIPS

Dry electric shaver

PowerTouch

DualPrecision Pivoting heads

50 min cordless use/1 hr charge

Pop-up trimmer

Jet clean system



PT870/22



DualPrecision

Catches more hairs

PowerTouch Plus adds power to your morning. Now with more minutes per charge, fully washable heads and DualPrecision blades - that give you a cleaner shave. With PowerTouch Plus you'll always fly through your morning routine.



A comfortable and close end result

- DualPrecision cutting shaves even the shortest stubble
- Super Lift & Cut system for a comfortably close shave
- Pop-up trimmer perfect for sideburns and moustaches
- SmartPivot maintains constant skin contact

The fastest way through your morning routine

- 50+ minutes of cordless shaving, 1 hour charge
- Washable shaver with QuickRinse system
- Jet Clean system cleans, charges and renews your shaver



asimpleswitch.com

Highlights

DualPrecision Cutting



The DualPrecision shaving heads of the electric shaver have slots to shave the normal hairs and holes to shave even the shortest stubble

Efficient Power System: 50+ min




50+ minutes of cordless power for 17 shaves. Fully charges in 1 hour so it is always ready when you are

Super Lift&Cut Action



The dual-blade system built into our electric shaver lifts hairs to cut comfortably below skin level for a closer shave

Pop-up trimmer

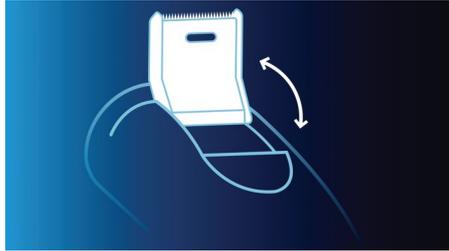

The shaver has a full-width, pop-up trimmer, which is perfect for grooming your sideburns and moustache

Fully washable shaver



Fully washable electric shaver with QuickRinse system rinses clean in less time

Jet Clean system



Thoroughly washes, lubricates, dries and charges to renew the shaver for a superior shave day after day

SmartPivot



The shaver constantly keeps the 3 shaving heads in close contact with your skin for a fast shave



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Shaving Performance

Shaving system: Super Lift and Cut, DualPrecision heads

Contour-following: SmartPivot

Styling: Integrated pop-up trimmer

Ease of use

Display: 2 LED indication

Cleaning: Quick rinse hair chamber, Fully washable

Shaving time: 50+ minutes, up to 17 shaves

Charging time: 1 hour, 3 min quick charge for 1 shave

Display indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick

charge

Operation: Corded and cordless, Rechargeable battery

Design

Handle: Ribbed rubber grip, Anti-slip, Ergonomic Easy Grip

Colour: NA

Finishing: NA

Accessories

Maintenance: Cleaning brush, Protective cap

Jet Clean: Automatic cleaning and charging

Service

Replacement head: HQ8 has been replaced by SH50

Guarantee: 2 year guarantee

Replacement heads: Replace every 2 yrs with SH50 (these have replaced HQ8)

Power

Automatic voltage: 100-240 V

Battery type: Lithium-ion

Stand-by power: < 0.25 W

Maximum power consumption: 5.4 W

