

Philips
Bagless vacuum cleaner

1600W
PowerCyclone 5
3 accessories

FC5822/61



Powerful cleaning from floor to ceiling

With Advanced PowerCyclone5 for high suction power

The new Philips EasyPro combines powerful cleaning with accessories that will help you to reach every corner easily. Easy to empty dust container helps avoiding dust clouds. You can enjoy better cleaning results in an easy way.

Easy to clean

- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying

Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.

Extra reach for perfect cleaning results

- Integrated brush on handgrip

Powerful cleaning performance

- PowerCyclone 5 technology separates dust and air in one go
- PowerControl function for extra power when you need it
- 1600 Watt motor for high performance

Protection of your floors

- Big rubber wheels for protection of your floors

PHILIPS

Highlights

1600 Watt Motor



The 1600 Watt motor generates max 350 Watt suction power for high performance.

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

Integrated brush

A tool always at hand for cleaning furniture and small spaces.

Crevice tool

Crevice tool help you to clean your furniture.

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Easy Carrying




Extra handle for easy carrying.

Big rubber wheels



The big wheels are made with soft rubber on the outside, so they will not damage your floor during usage.

PowerControl function

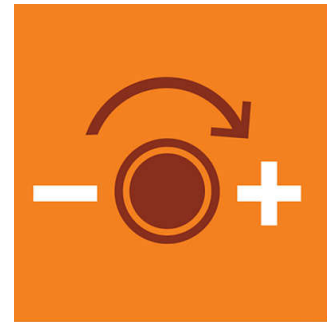

You can adjust the suction power with the turning wheel. Turn to the maximum for extra power when you need it.

Specifications

Nozzles and accessories

- Accessories included: Crevice tool
- Standard nozzle: Hard and Soft Floor Nozzle
- Accessory storage: On tubeclip

Design

- Color: Citrus orange

Weight and dimensions

- Weight of product: 5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Input power (IEC): 1400 W
- Input power (max): 1600 W

Filtration

- Dust capacity: 1 L
- Exhaust filter: Microfilter
- Motor filter: Washable filter

Usability

- Tube coupling: Conical
- Action radius: 8 m
- Cord length: 5 m
- Carrying handle: Top and front
- Tube type: Plastic 2-P tube
- Power control: Knob on canister
- Wheel type: Rubber



Issue date 2023-08-21

Version: 1.1.1

EAN: 87 10103 65691 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com