



Philips Azur
Steam iron

Steam 40g/min; 180g steam boost

SteamGlide soleplate
Safety Auto Off
2400 Watts

GC4855/22

Designed for perfection

Iron with powerful steam performance

This new Philips Azur iron comes with an optimal design and weight to maneuver the iron easily over the garment, even into the hard to reach areas. Together with its powerful steam performance it gives you all you need for perfect results.

Easy gliding on all fabrics

- SteamGlide soleplate is Philips premium soleplate

Safe ironing

- Automatically turned off for safety and energy saving

Easily removes creases

- Continuous steam output up to 40 g/min
- Steam boost up to 180 g
- 2400 W for quick heat up


Designed for perfect results

- Optimal design to manoeuvre the iron easily over the garment
- Lightweight to move the iron easily on and off the board
- Steam tip allows you to have steam in hard-to-reach areas
- Sideways opening filling door

PHILIPS

Highlights


Steam tip

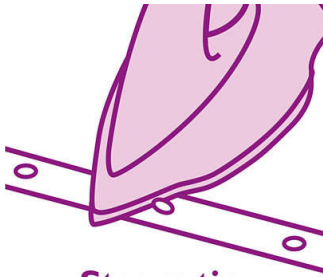

Steam tip

The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

Lightweight iron

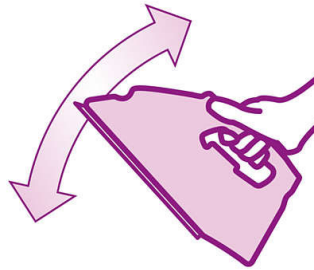

The iron has an optimal weight of 1.6kg making it easy to constantly place the iron on the board and back to its heelrest.

2400 W for quick heat up

Automatic shut-off

Safety auto off

The safety auto off function automatically switches off the appliance if it has not been used for a few minutes, also saving energy.

SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

2400W max

2400 W for quick heat up and powerful performance

Up to 40 g/min of steam



40 g


Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.



180 g boost

The steam boost can be used for vertical steaming and tough creases.


Easy filling

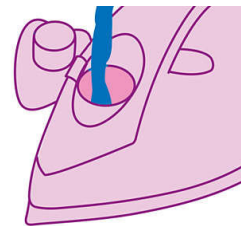

Sideways opening

Sideways opening filling door

Easy to handle

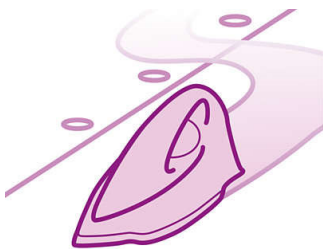

Easy to handle

The Philips steam iron is designed to manoeuvre it easily over the garment and enabling you to reach easily even the hardest to reach areas.

Specifications

Easy to use

- Water tank capacity: 350 ml
- Safety auto off
- Drip stop
- Cord storage: Cord clip
- Power cord length: 2.5 m
- Fast and easy filling

Fast & powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 40 g/min
- Power: 2400 W
- Steam boost: 180 g
- Vertical steaming

- Spray
- Steam tip
- Variable steam settings

Technical specifications

- Weight of iron: 1.6 kg
- Voltage: 220 - 240 V

Calc management

- Calc clean solution: Double active calc clean

Comfortable ironing

- Cord length: 2.5 m



Issue date 2022-05-07

Version: 1.1.1

EAN: 08 71010 35949 01

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com