

Philips Viva Collection
Food processor

750 W

Compact 3 in 1 setup
2.1 L bowl
Accessories for + 28 functions

HR7762/91



Maximum variety of recipes, minimum effort

Create home made cakes, gratins, salads and more

This Philips Food Processor has a 3 in 1 compact set-up with a 2.1 L bowl, blender and grinder mill. It also has 4 stainless steel discs enabling you to effortlessly create a wide variety of your favorite recipes. Accessory storage included

Effortlessly easy

- Color coded accessory and speed combinations
- Form fitting couplings and tools for easy assembly
- Practical accessory storage included

Maximum variety of recipes

- Up to 5 portions in one go

Powerful precision

- 750 W motor for powerful processing
- PowerChop technology for superior chopping performance
- 2 speed settings and pulse for maximum control
- Accessories to easily perform 28+ functions

Reliably durable

- Stainless discs to slice, shred, granulate, cut French fries
- Dishwasher safe accessories
- Break-resistant jar for intensive use


PHILIPS

Food processor
750 W Compact 3 in 1 setup, 2.1 L bowl, Accessories for + 28 functions

HR7762/91

Highlights

Powerful processing

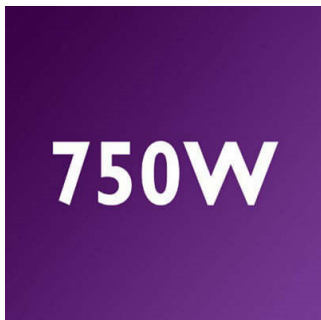

This Philips Food Processor offers a powerful motor with 2 speeds and pulse, providing power and control to prepare all your favorite recipes.

PowerChop technology



PowerChop

PowerChop technology is a combination of blade shape, cutting angle and inner bowl that provides a superior chopping result in both soft and hard ingredients. It is also perfect for making purées and mixing your cake batters!

Accessories for 28+ functions



The - dishwasher safe - accessories are a kneading tool to mix and knead batter and

dough. A stainless steel chopping knife to prepare meat and vegetables. Various disc inserts to handle shredding and grating. Break resistant blender of 1L for blending, crushing and stirring different ingredients. An emulsifying disc to prepare food like whipped cream and mayonnaise. A chopper mill to grind e.g. coffee beans

Up to 5 portions in one go



The generous 2.1L bowl (1.5 L working capacity) enables you to blend up to 5 portions of soup in one go.

Break-resistant jar



A 1.75-liter break-resistant jar has a working capacity of 1 liter for up to up to 5 smoothie portions at once.

Color coded accessories/speeds


Match the color of the speed with the color of the accessory for optimized results.

Accessory storage included



The accessory storage box keeps all your Philips food processor accessories easily at hand. It also helps you to keep all the sharp stainless steel accessories out of harm's way!

Form fitting couplings & tools

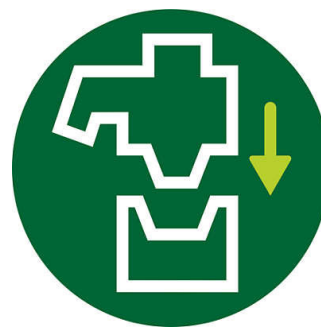

This Philips food processor is designed to be very easy to assemble. Its parts simply click together thanks to the clever form fitting design of the accessories.

Stainless steel discs



Full metal stainless steel discs ensure fast processing so you can spend less effort in preparing home made meals

Specifications

Accessories

- Included: Blade unit S-blade, Coarse shredding tool, Coarse slicing tool, Fine shredding tool, Fine slicing tool, French-fry tool, Granulating tool, Julienne tool, Kneading tool, Mill, Reversible disc

Technical specifications

- Power: 750 W
- Cord length: 1.0 m
- Voltage: 220-240 V
- Capacity bowl: 2 L
- Frequency: 50-60 Hz
- Working capacity bowl: 1.5 L
- Capacity jar: 1.75 L
- Working capacity jar: 1.0 L
- Capacity mill: 250 ml
- RPM blender (max): 21000 rpm
- RPM bowl (max): 1900 rpm

Design

- Color: Black

Consumer Trade Item

- Height: 48.5
- Width: 31.5
- Length: 33
- Net Weight: 3.561
- Gross Weight: 4.261
- GTIN: 08710103562597
- Country of origin: CN
- Harmonized system code: 850940

Outer Carton

- Height: 67.4
- Width: 33
- Length: 50
- Gross Weight: 9.727
- GTIN: 18710103562594

Weight and dimensions

- Dimensions of product (LxWxH):
210x210x368 mm

General specifications

- Product features: Integrated cord storage, Non-slip feet, Storage compartment
- Number of speed settings: 2 + pulse

Finishing

- Material of main body: Plastic ABS
- Material accessories: Stainless steel
- Material jar: Plastic SAN

Service

- 2-year worldwide guarantee

Other

- Height: 216.6
- Width: 80
- Length: 120
- GTIN: 68710103562599

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper



Issue date 2023-03-29

Version: 1.1.2

EAN: 87 10103 56259 7

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com