



**Philips Saeco Xsmall
Super-automatic
espresso machine**

- Brews 2 coffee varieties
- Classic Milk Frother
- Silver
- 5-step adjustable grinder



HD8747/09

Taste the aroma of your favourite coffee beans

one-touch bean-to-cup espresso

Whatever coffee you wish to try next, the Saeco Xsmall will grind the beans freshly on the spot at the touch of a button. It comes equipped with a manual frother to add a touch of milk froth pleasure to all your fresh coffee drinks.

Authentic Italian coffee perfection

- Coffee without burnt taste thanks to 100% ceramic grinders
- Delicious milk froth thanks to the classic milk frother


Easy to clean and maintain

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to removable brewing group

Set the beverages to suit your taste

- Save your favourite coffee length
- Play with the coffee's richness with our adjustable grinders

 **Saeco**



Highlights

Automatic circuit cleaning




Saeco designed this espresso machine to automatically clean its coffee circuit with water when the machine is started up or switched off. This delivers a great, fresh taste with each cup of coffee.

100% ceramic grinders



This espresso machine is equipped with 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean, for an impeccable espresso. Ceramic also ensures long-lasting performance and totally silent operation.

Saves your coffee length

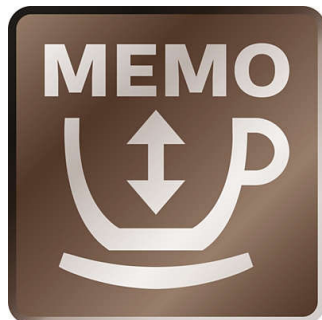

You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function, which allows you to adjust the coffee length to suit your taste. Enjoy a superb coffee drink at the touch of a button.

Classic milk frother




This Saeco espresso machine comes with the classic milk frother, which baristas call "Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

5-step adjustable grinders



Different coffee blends require different levels of granularity for the full flavour to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full-bodied espresso, to the coarsest, for a lighter café crème.

Removable brewing group

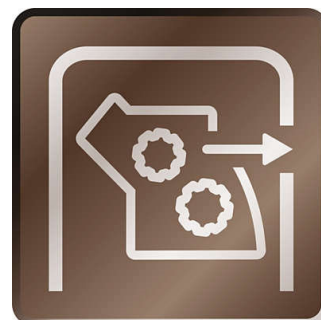

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easy cleaning by rinsing under the tap, ensuring maximum hygiene.

Specifications

Easy to use

- Usage: Removable brewing group, Removable water tank
- Cleaning and maintenance: Automatic coffee circuit rinse

Weight and dimensions

- Product weight: 7.2 kg
- Product dimensions (L x D x H): 420 x 325 x 295 mm
- Coffee bean capacity: 180 g
- Waste container capacity: 8 serv
- Maximum cup height: 95 mm
- Water tank capacity: 1 L

Technical specifications

- Boiler material: Stainless steel (Inox)
- Cord length: 80 cm
- Supported coffee types: Whole coffee beans
- Voltage: 230 V

- Power: 1400 W
- Frequency: 50 Hz
- Country of origin: Designed in Italy, Made in Europe
- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Perfect Espresso

- Espresso technology: Aroma-system: pre-brewing

Service

- 2-year worldwide guarantee

Technical data

- Power: 1400 W
- Voltage: 230 V
- Pump Pressure: 15 bar
- Frequency: 50 Hz



Issue date 2022-05-07

Version: 1.0.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com