

Philips Marathon
Bagless vacuum cleaner

AutoClean
HomeCare

FC9232/01



Performs better for longer

Self-cleaning filter, no bag required

Unique AutoClean function to clean your bagless filter easily and maintain optimal suction power

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Optimal cleaning power every time

- AutoClean filter optimises suction power


Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

PHILIPS


Highlights

2000 Watt motor

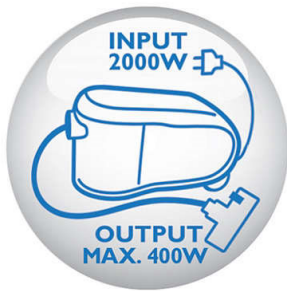

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

AutoClean filter

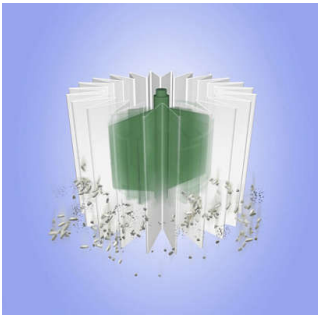

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.



HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 78 dB
- Airflow (max): 37 l/s
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s
- Input power (max): 2000 W
- Suction power (max): 400 W

Design

- Colour: Pearl silver

Usability

- Tube coupling: Button
- Action radius: 12 m
- Action radius: 12 m
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 9 m
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Filter type: HEPA

