



Philips Jewel
Vacuum cleaner with bag

2000 W

425-W suction power
HEPA 12 filter
Anti-Allergy

FC9064/01

Beautiful results in the blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results, fast. It comes with the patented Tri-active nozzle, which gives you three cleaning actions in one stroke.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS


Highlights

2000 Watt motor




The highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter

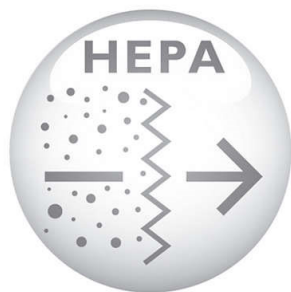

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that cause respiratory allergies.

Active fragrance control

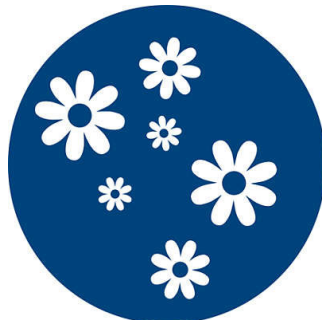

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

Design

- Colour: Spectra yellow

Usability

- Tube coupling: Button
- Action radius: 10 m
- Cord length: 7 m
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette
- Active fragrance control

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 filter

