

Philips Jewel
Vacuum cleaner with bag

2000W
Parquet

FC9066/03



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS


Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter

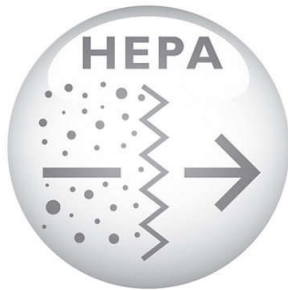

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Active fragrance control

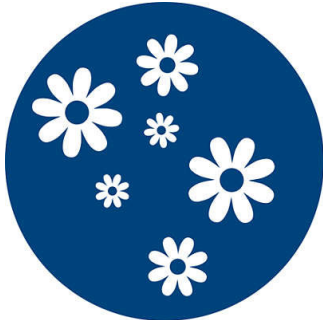

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Super Parquet nozzle



The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

Design

- Color: Denim blue

Usability

- Tube coupling: Button
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette
- Active fragrance control

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Additional nozzle: Super Parquet nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust capacity: 3 L
- Dust bag type: s-bag
- Exhaust filter: Super Clean Air HEPA 12 filter

