

Philips PowerPro Compact
Bagless vacuum cleaner

1800W

PowerCyclone 4
HEPA 10 washable filter
Parquet

FC8473/61



20% higher suction power* for a better clean

With PowerCyclone 4 Technology

The new Philips PowerPro Compact vacuum cleaner delivers powerful performance without compromises thanks to the PowerCyclone 4 technology and advanced bucket design

Easy to clean

- Advanced dust container design for easy to emptying

Clean air in your home

- The EPA filter catches microscopic vermin causing allergy

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch-protection

Ergonomic grip for far reach

- Reach all corners thanks to the extra long ergonomic grip

Powerful cleaning performance

- 1800 Watt motor for high performance
- PowerCyclone 4 technology separates dust and air in one go

PHILIPS

Highlights

Parquet nozzle



No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

1800 Watt Motor



The 1800 Watt motor generates max 350 Watt suction power for high performance.

Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

PowerCyclone 4 Technology




PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

EPA filter system



The pleated EPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

Extra long ergonomic grip

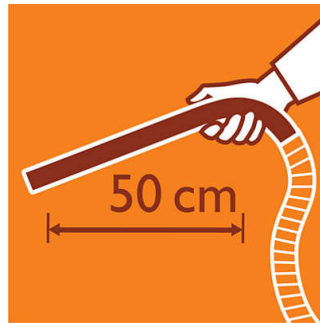

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Specifications

Performance

- Input power (max): 1800 W
- Input power (IEC): 1600 W
- Noise level (Lc IEC): 83 dB
- Suction power (max): 350 W
- Vacuum (max): 25 kPa
- Airflow (max): 35 l/s

Design

- Color: Deep black

Usability

- Tube coupling: Conical
- Action radius: 9 m
- Cord length: 6 m
- Carrying handle: Front
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Plastic

Nozzles and accessories

- Standard nozzle: All-purpose nozzle
- Accessories included: Crevice tool, Small nozzle
- Additional nozzle: Parquet nozzle

Weight and dimensions

- Dimensions of product (LxWxH): 406x285x238 mm
- Weight of product: 4.5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Sponge
- Motor filter: EPA 10 washable filter



Issue date 2023-03-11

Version: 1.1.3

EAN: 87 10103 65302 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Suction power tested in accordance with international standard DIN EN 60312/11/2008, tested by external test institute SLG Prüf- und zertifizierungs GmbH (Philips Consumer Lifestyle B.V., January 2013).