



Philips
Bagless vacuum cleaner

1400W
PowerCyclone 3
3 accessories



FC8085/61

Small on the outside, powerful on the inside

Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

Easy to clean

- Easy to clean washable filter
- Advanced dust container design for easy emptying

Easy to clean

- Extra handle for easy carrying with cord winder function

Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.

Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip

Good cleaning results

- PowerCyclone technology separates dust and air in one go
- 1400 Watt motor generating high suction power

PHILIPS

Highlights

PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

Crevice tool

Crevice tool help you to clean your furniture.

Easy to clean filter



Washable foam filter for life-long performance.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Extra handle for easy carrying




Extra handle for easy carrying with cord winder function.

Light weight and compact



You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Small sized appliance

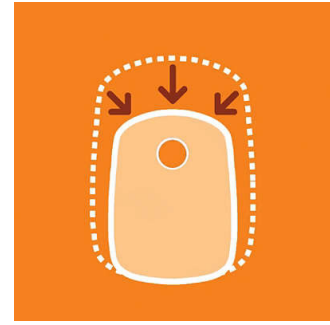

Small sized appliance for compact storage.

Easy to empty dust container



Dust container is perfectly designed to dispose dust without creating a dust cloud. 1 button bottom lid operation makes cleaning easy for you.

1400 W motor



This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.

Specifications

Performance

- Input power (max): 1400 W
- Input power (IEC): 1200 W
- Suction power (max): 200 W

Design

- Color: Citrus orange

Usability

- Tube coupling: Conical
- Action radius: 7 m
- Cord length: 4.5 m
- Carrying handle: Top and front
- Tube type: Plastic 2-P tube
- Wheel type: Plastic
- Dust container full indicator

Nozzles and accessories

- Standard nozzle: Hard and Soft Floor Nozzle
- Accessories included: Crevice tool, Long bend tool

Weight and dimensions

- Weight of product: 3.1 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 1.1 L
- Exhaust filter: Foam filter
- Motor filter: Microfilter



Issue date 2023-04-14

Version: 1.1.1

EAN: 87 10103 73391 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com