




**Saeco Intuita
Super-automatic
espresso machine**

- Brews 3 coffee varieties
- Classic Milk Frother
- Black
- 5-step adjustable grinder

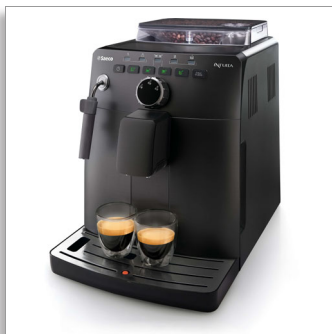

HD8750/18

Espresso from fresh beans

Select your aroma with this espresso machine

The Saeco Intuita espresso machine offers you the possibility of tasting freshly ground espresso at the touch of a button and selecting your aroma. It's easy to use, easy to customise and easy to clean

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without burnt taste thanks to 100% ceramic grinders
- Coffee without the wait thanks to the quick-heat boiler
- Saeco adapting system: automated grinding adaptation

Easy to clean and maintain

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to removable brewing group

Easy to clean and maintain

- Dishwasher-safe drip tray and servings container

Set the beverages to suit your taste

- Save your favourite coffee length and strength

Set the beverages to suit your taste

- Avoid heat loss and fit every cup with our adjustable spout

 **Saeco**



Highlights

Automatic circuit cleaning



Saeco designed this espresso machine to automatically clean its coffee circuit with water when the machine is started up or switched off. This delivers a great, fresh taste with each cup of coffee.

100% ceramic grinders



This espresso machine is equipped with 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean, for an impeccable espresso. Ceramic also ensures long-lasting performance and totally silent operation.

Quick-heat boiler



The Saeco quick-heat boiler technology ensures your machine is always ready. Now

you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Classic milk frother



This Saeco espresso machine comes with the classic milk frother, which baristas call "Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

Saves coffee length and strength



You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function, which allows you to adjust the coffee length and strength to suit your taste. Enjoy a superb coffee drink in your favourite cup at the touch of a button.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevent the coffee splashing or cooling down while being poured into your cup. This way your espresso is always served at the right temperature, while the machine is kept clean.

Dishwasher-safe drip tray

You can safely put the drip tray and servings container in your dishwasher, giving them a perfect time-saving clean.

5-step adjustable grinders



Different coffee blends require different levels of granularity for the full flavour to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full-bodied espresso, to the coarsest, for a lighter café crème.

Specifications

Easy to use

- Usage: Adjustable coffee dispenser, Rapid steam, Removable brewing group, Normal/long espresso option
- Cleaning and maintenance: Automatic coffee circuit rinse

Weight and dimensions

- Product weight: 8 kg
- Coffee bean capacity: 300 g
- Product dimensions (L x D x H): 256 x 440 x 340 mm
- Waste container capacity: 10 serv
- Maximum cup height: 152 mm
- Water tank capacity: 1.5 L

Technical specifications

- Cord length: 80 cm
- Supported coffee types: Whole coffee beans

- Power: 1850 W

- Country of origin: Designed in Italy, Made in Europe
- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Features

- Brita Filter compatible: Optional
- Pannarello: Plastic
- Simultaneous brewing

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Design

- Colour: Matt Black
- Materials and finishing: Plastic