

Philips EasyLife
Bagless vacuum cleaner

1400 W

FC8144/01



Save up to 20% energy*

Vacuum cleaner for greener results

The Philips EasyLife vacuum cleaner is designed to deliver excellent cleaning results while consuming less energy than standard vacuum cleaners. Furthermore, you can easily empty the bucket without getting dirty hands with a simple push of a button.

Clean air in your home

- HEPA filter for excellent filtration of the exhaust air

Be sure of optimum cleaning performance

- Indicator light shows when bucket needs emptying

Easy dust disposal

- Handle for easy removal of the dust container
- Dust container with one-button release system

Low power consumption, high-power results

- 1400 Watt motor generating max. 300 Watt suction power

PHILIPS

Specifications

Performance

- Input power (IEC): 1400 W
- Noise level (Lc IEC): 82 dB
- Suction power (max): 300 W
- Vacuum (max): 28 kPa
- Airflow (max): 34 l/s

Usability

- Tube coupling: Conical
- Action radius: 10 m
- Cord length: 6 m
- Carrying handle: Front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber
- Dust container full indicator

Nozzles and accessories

- Standard nozzle: All-purpose nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On tubeclip

Weight and dimensions

- Dimensions of product (LxWxH): 428.5 x 314 x 213 mm
- Weight of product: 5.5 kg

Sustainability


- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 1.7 L
- Exhaust filter: HEPA washable filter
- Filter type: HEPA


Highlights

1400 Watt, 300 Watt EasyLife

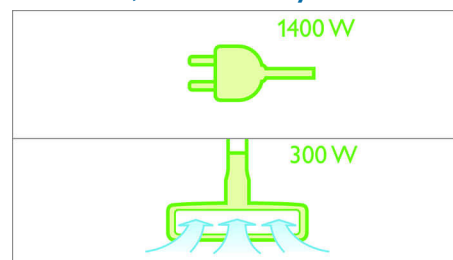

The efficient 1400 Watt motor generates 300 Watt max. suction power, which means that you use less energy but do not compromise on the cleaning results.

Indicator light

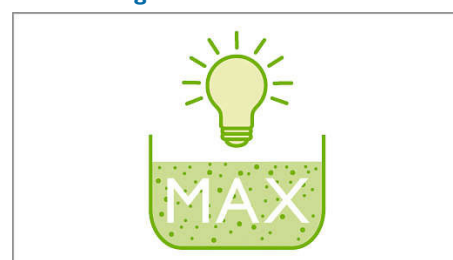

The indicator light turns on when the bucket is full and needs to be emptied. Emptying and cleaning the bucket and the filter will ensure you keep optimum cleaning performance.

Dust container handle


The handle of the dust container will help you to easily take it out and hold it over the rubbish bin.

One-button release system



The closed dust container of the Philips bagless vacuum cleaner can be emptied from the bottom at the simple push of a button.

HEPA filter

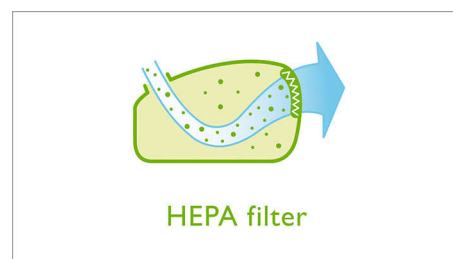

This HEPA filter catches harmful microscopic vermin that cause respiratory allergies. To maintain effective filtration, replace the HEPA filter every 6 months.



Issue date 2023-04-13

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to a 2000 Watt vacuum cleaner. Philips internal measurements, 2010.