

Philips Jewel
Vacuum cleaner with bag

ParquetCare

FC9076/02



Beautiful results in the blink of an eye

Tri-active nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results, fast. It comes with the patented Tri-active nozzle which gives you three cleaning actions in one stroke.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS

Highlights

2000 Watt motor




The highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Active fragrance control

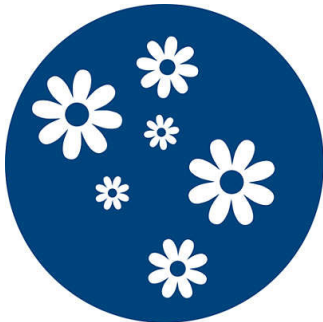

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Super Parquet nozzle



The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 43 l/s
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s
- Input power (max): 2000 W
- Suction power (max): 450 W

Design

- Colour: Denim blue

Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Front
- Tube type: Metal lacquered 2-piece telescopic tube
- Cord length: 7 m
- Power control: Electronic on appliance
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Dust capacity: 3 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com