

Philips Jewel
Vacuum cleaner with bag

AnimalCare

FC9067/02



Beautiful results in the blink of an eye

Tri-active nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results, fast. It comes with the patented Tri-active nozzle, which gives you three cleaning actions in one stroke.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS


Highlights

2000 Watt motor




The highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter

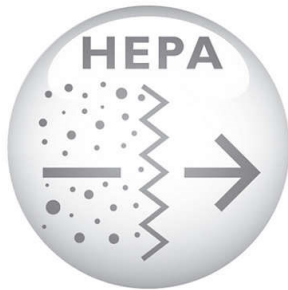

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that cause respiratory allergies.

Active fragrance control

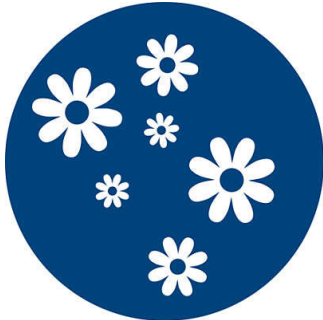

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage during use on hard floors.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 43 l/s
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s
- Input power (max): 2000 W
- Suction power (max): 450 W

Design

- Colour: Denim blue

Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Front
- Tube type: Metal lacquered 2-piece telescopic tube
- Cord length: 7 m
- Power control: Electronic on appliance
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Turbo brush

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com