

Philips EasyClean
Bagless vacuum cleaner

HomeCare

FC8716/02



Take the effort out of cleaning

No bag required

EasyClean is designed for those people who want a thorough cleaning result with minimal effort.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy dust disposal

- Dust bucket can easily be removed and emptied

Easily removes dirt and dust

- 1800 Watt motor generating max. 300 Watt suction power


Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

PHILIPS


Highlights

1800 Watt motor

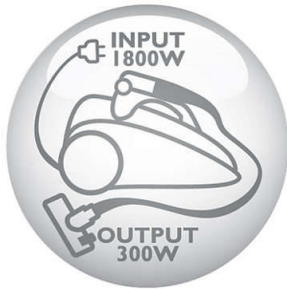

Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure perfect cleaning results.

Super Clean Air HEPA 12 filter

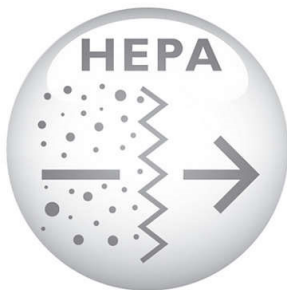

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that cause respiratory allergies.

Easy-to-empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor and makes it easy to find valuables that are sucked up accidentally.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 1800 W
- Input power (IEC): 1600 W
- Input power (IEC): 1600 W
- Noise level (Lc IEC): 79 dB
- Airflow (max): 34 l/s
- Suction power (max): 300 W
- Vacuum (max): 26.5 kPa
- Vacuum (max): 26.5 kPa
- Airflow (max): 34 l/s
- Input power (max): 1800 W
- Suction power (max): 300 W

Design

- Colour: Deep red

Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Cord length: 7 m
- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

Filtration

- Dust capacity: 2 L
- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Filter type: Gore-Tex HEPA 10

