



Philips Jewel
Vacuum cleaner with bag

ParquetCare

FC9060/02

Beautiful results in the blink of an eye

High suction power ensures quick dust removal

The Jewel range is ideal for those who want beautiful results, fast. The Jewel has a lightweight, compact, trendy design.

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch protection

Beautiful floors in a blink of an eye

- 1900 Watt motor generating max. 400 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS

Specifications

Performance

- Input power (max): 1900 W
- Input power (IEC): 1700 W
- Input power (IEC): 1700 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 41 l/s
- Suction power (max): 400 W
- Vacuum (max): 30 kPa
- Vacuum (max): 30 kPa
- Airflow (max): 41 l/s
- Input power (max): 1900 W
- Suction power (max): 400 W

Design

- Colour: Blue bonnet

Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 10 m



- Cord length: 7 m
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 7 m
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

Nozzles and accessories

- Standard nozzle: All-purpose nozzle
- Additional nozzle: Parquet nozzle

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 filter


Highlights

1900 Watt motor



This powerful 1900 Watt motor generates max. 400 Watt suction power for excellent cleaning results.

Active fragrance control

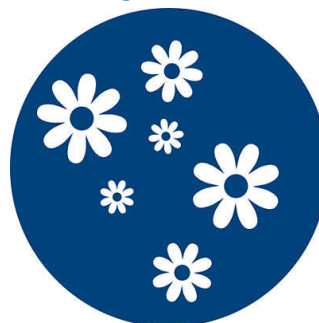

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Parquet nozzle



No more risk of scratches thanks to this nozzle with soft brush hairs, specially designed to carefully clean your hard floors.



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com