

Philips EasyClean  
Bagless vacuum cleaner

HomeCare

FC8734/02



# Take the effort out of cleaning

Extra long cord, no bag required

The Philips EasyClean bagless vacuum cleaner is designed for those people who want a thorough cleaning result with minimal effort.

#### **Clean air in your home**

- Super Clean Air HEPA 12 filter, 99.5% filtration

#### **Easy dust disposal**

- Dust bucket can easily be removed and emptied

#### **Easily removes dirt and dust**

- 1800 Watt motor generating max. 300 Watt suction power

#### **Easy cleaning, even around furniture**

- TriActive nozzle with unique 3-in-1 action


#### **Higher cleaning efficiency**

- Improved cyclone for longer-lasting suction power

# PHILIPS


# Highlights

## 1800 Watt motor

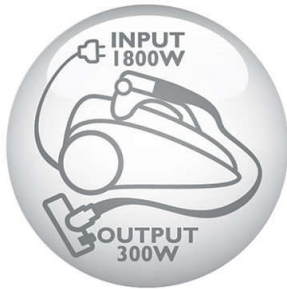

Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure perfect cleaning results.

## Super Clean Air HEPA 12 filter

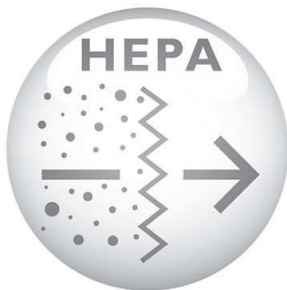

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that cause respiratory allergies.

## Easy-to-empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor

and makes it easy to find valuables that are sucked up accidentally.

## Improved cyclone



This EasyClean has an improved cyclone that filters even more dust out the air.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

- Input power (max): 1800 W
- Input power (IEC): 1600 W
- Input power (IEC): 1600 W
- Noise level (Lc IEC): 79 dB
- Airflow (max): 36 l/s
- Suction power (max): 300 W
- Vacuum (max): 29 kPa
- Vacuum (max): 29 kPa
- Airflow (max): 36 l/s
- Input power (max): 1800 W
- Suction power (max): 300 W

## Design

- Colour: Deep red

## Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 11 m
- Cord length: 8 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 8 m
- Wheel type: Rubber

## Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip

## Weight and dimensions

- Weight of product: 6 kg

## Filtration

- Dust capacity: 2 L
- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Filter type: Gore-Tex HEPA 10

