




Philips HomeHero
Vacuum cleaner with bag

1800 W

AirflowMax technology
Parquet

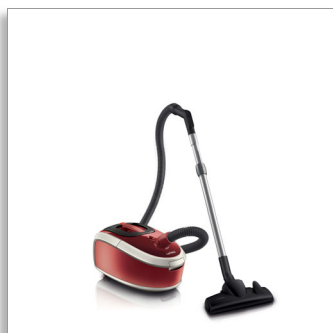

FC8912

Live life!

Vacuum cleaner for easy cleaning

Get the job done quickly and easily with Philips HomeHero vacuum cleaner. This cleaner delivers great suction power, dust filtration and flexible nozzles for thorough cleaning without the hassle.

High cleaning power

- 1800 Watt motor generating max. 325 Watt suction power

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch protection

Highly efficient anti-allergy system

- EPA AirSeal plus EPA 12 filter

Hygienic disposal of dust bag

- Unique Clean Comfort Cassette to avoid contact with dust


Easy to use all over the house

- Two comfortable carrying handles for extra convenience

PHILIPS

Highlights

1800 Watt motor

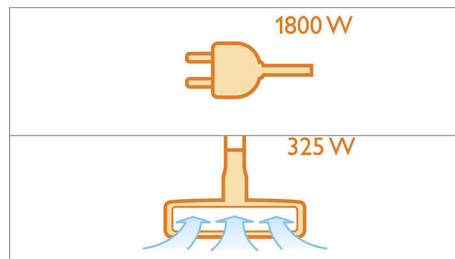


1800 Watt motor generating max. 325 Watt suction power for perfect cleaning results.

EPA AirSeal, EPA 12 filter




This vacuum cleaner has been designed in such a way that all the air taken in is passed through the EPA 12 filter (99.5% filtration) before it is exhausted. No escape is possible.

Parquet nozzle

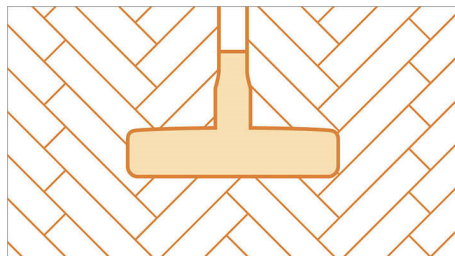


No more risk of scratches thanks to this nozzle with soft brush hairs, specially designed to carefully clean your hard floors.

Clean Comfort Cassette

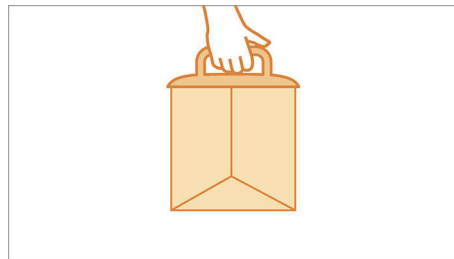

When you dispose of the dust bag from your Philips vacuum cleaner, there will be no contact with the dust thanks to this patented dust bag holder.

Comfortable carrying handles

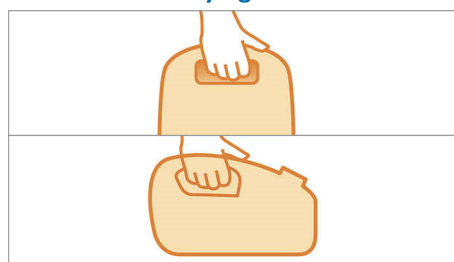

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Performance

- Input power (max): 1800 W
- Input power (IEC): 1600 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 325 W
- Vacuum (max): 30 kPa
- Airflow (max): 42 l/s

Design

- Colour: Pistil Red

Usability

- Tube coupling: Conical
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

Nozzles and accessories

- Accessories included: Crevice tool
- Standard nozzle: Wheeled all-purpose nozzle
- Accessory storage: On tubeclip
- Additional nozzle: Parquet nozzle

Weight and dimensions

- Weight of product: 5.5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 washable filter
- HEPA Air Seal



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com