



Philips Café Gourmet Coffee maker

- With glass jug
- Boil and brew system
- Black

HD5405/60

Designed to brew the best tasting filter coffee

Superior Boil & Brew system

This elegant Philips coffeemaker allows you to enjoy a rich aroma and a full flavor thanks to its unique Boil & Brew system.

Great taste and aroma

- Boil & Brew system for ultimate aroma and taste

Easy to experience

- Drip stop to pour a cup of coffee whenever you like
- Swing filter holder for easy filling of coffee
- Cable storage for easy placement in your kitchen
- LED power switch lights up when the coffee maker is switched
- Dishwasher-safe parts for easy cleaning

PHILIPS

Coffee maker
With glass jug Boil and brew system, Black

HD5405/60


Highlights

Boil & Brew




The Philips coffeemaker has a unique Boil & Brew system. Water is boiled first and then flows through ground coffee. Thanks to high brewing temperature reaching 93°C or higher, this ensures the richest flavor and superior aroma for your filter coffee.

Drip stop

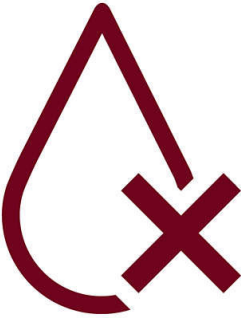


The drip stop allows you to pour a cup of coffee before the full brewing cycle is finished.

Swing filter holder

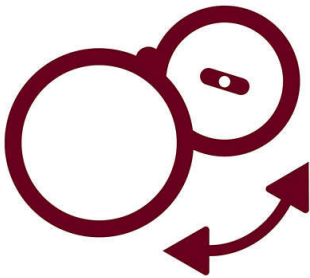

The filter holder is opened by swinging it to the side, which makes the filling of coffee easy. The filter holder is also detachable, for easy cleaning.

LED power switch

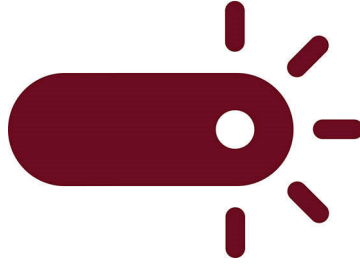


The red light on the switch button illuminates when the coffee maker is switched on.

Cable storage



Spare cable can be stored in the cable compartment under the coffee maker. It enables placing the coffee maker nicely in your kitchen.

Dishwasher-safe parts

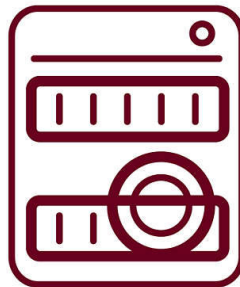

The jug and filter holder can be easily cleaned in the dishwasher.

Specifications

Technical specifications

- Power: 1300 W
- Voltage: 220/240 V
- Cord length: 0.88 m
- Supported coffee types: Ground coffee
- Frequency: 50-60 Hz
- Capacity: 1.0/8-12 Litres / cups
- Brewing time: 11 minute(s)

General specifications

- Non slip feet
- Ease of cleaning & maintenance: Dishwasher-safe parts
- Drip-stop
- Translucent water tank
- Illuminated power switch
- Unique design architecture
- Dishwasher proof swing filter and jug
- Boil and brew system

Accessories

- Jug: HD7919

Design specifications

- Color(s): Black/chrome
- Dimensions (L x W x H): 210*210*490 mm
- Bowl, cover, pusher: Plastic (polypropylene), chromium plated steel, glass jug
- Weight appliance: 2.3 kg
- Weight (incl. packaging): 3 kg

Ultimate taste and aroma

- Boil and brew system

Good filter coffee made easily

- Water level indication



Issue date 2022-05-27

Version: 1.1.2

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com