

Philips Marathon
Bagless vacuum cleaner

2200W

440W suction power
HEPA 13 filter
Parquet, AutoClean

FC9225/01



Performs stronger for longer

Self-cleaning filter, no bag required

Philips Marathon bagless vacuum cleaner offers you very high cleaning performance thanks to its automatic filter cleaning system.

Highly efficient anti-allergy system

- Ultra Clean Air HEPA 13 filter with 99.95% filtration

Easy cleaning, even around furniture

- Additional parquet nozzle with scratch-protection

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Extra long reach for convenient cleaning

- More cleaning with less effort

Optimal cleaning power every time

- AutoClean filter optimizes suction power

PHILIPS


Highlights

AutoClean filter




After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2200 Watt motor generating max

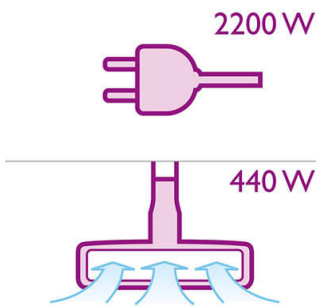

2200 Watt motor generating max. 440 Watt suction power

Additional parquet nozzle

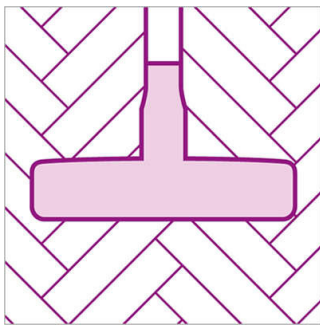


Additional parquet nozzle with scratch-protection

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

10 m action radius

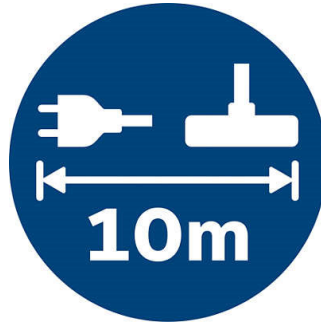

10 m action radius for cleaning with less effort.

Ultra Clean Air HEPA 13 filter



The Ultra Clean Air HEPA 13 filter captures at least 99.95% of all dust, ensuring a clean & allergen-free environment.

Specifications

Performance

- Input power (max): 2200 W
- Input power (IEC): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 440 W
- Vacuum (max): 33 kPa
- Airflow (max): 40 l/s

Design

- Color: Pearl silver

Usability

- Action radius: 10 m
- Tube coupling: Button
- Cord length: 7 m
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Additional nozzle: Parquet nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 filter
- Filter cleaning system: AutoClean system
- HEPA Air Seal

