

PHILIPS

Face

OneBlade

Get your style with Oneblade

Experience Power of 3

Style, trim, shave

Keep your skin feeling soft



QP2525/10



The power of 3: style, trim and shave

Keeps skin feeling soft

The Philips OneBlade is a revolutionary new hybrid tool that can style, trim and shave, while keeping the skin feeling soft. Forget about using multiple steps and tools. Get your style with just OneBlade.

Easy to use

- Each blade lasts 4 months
- Use wet or dry
- Charge up and go

Comfortable shave

- Unique OneBlade Technology
- Not too close, keeping your skin feeling soft

Easy styling

- Create easy styling & sharp edges
- Easy styling and precise edges

Even trim

- 3 click-on trimming combs (1, 3, 5mm) for an even trim
- Achieve an even trim

Highlights

Unique OneBlade Technology




The Philips OneBlade has a revolutionary new technology designed for men who wear facial styles and grow beards. It can style, trim and shave, while keeping the skin feeling soft. Its dual protection system has a protective plate on top of the cutter, preventing the blade from touching skin. At the same time, the high-performance cutter powers through hair at 200 times per second for precise sharp edges. OneBlade doesn't shave as close as a traditional blade – so your skin stays comfortable.

Style



Dual-sided blade for easy styling and precise edges. You can go in either direction to get great visibility and see every hair that you're cutting. It stays comfortable even in sensitive areas, so it's fast and easy to get your style in seconds.

Trim (3 combs)

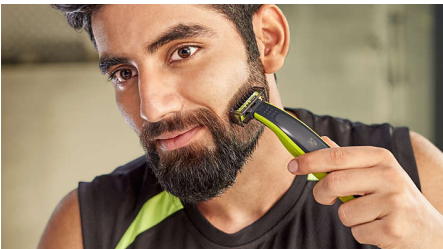

Achieve an even trim with the 3 trimming combs. 1mm for a 5 o'clock, 3mm for a tight trim, and 5mm for a long stubble.

Shave



OneBlade has a protective plate on top of the cutter, preventing the blade from touching skin. The dual protection system keeps your skin protected, no matter trim or shave.

Dual-sided blade



OneBlade follows the contours of your face, allowing you to easily and comfortably style all areas. Go against the grain. Use the dual-sided blade to get your style and create sharp edges by moving the blade in any direction.

3 click-on trimming combs



Attach one of the click-on combs to get the even trim you want.

Wet & dry



Use this waterproof razor at the sink or take it with you into the shower. The OneBlade wet and dry razor is easy to clean and can be used with or without foam.

Durable OneBlade



Easily replace your blade once every 4 months* for optimal performance. A green usage indicator will appear once the blade is worn out.

Long lasting battery



A single charge takes 8 hours, and delivers 45 minutes of constant performance.

Specifications

Trimming & shaving performance

Shaving system: Contour-following technology, Dual protection system

Trimming system: Contour-following technology

Accessories

Comb: 3 stubble combs (1, 3, 5 mm)

Power

Run time: 45 minutes

Charging: 8 hours full charge

Automatic voltage: 100–240 V

Battery type: Ni-MH

Max power consumption: 2 W

Design

Handle: Ribbed rubber grip

Color: Lime green, charcoal grey

Service

2-year guarantee: 2-year guarantee on the handle

Replacement head: QP210, QP220, QP610, QP620, Replace every 4 months*

Ease of use

Charging: Rechargeable

Wet and dry use

