

PHILIPS

Wet and Dry
epilator

Satinelle Advanced

For legs, body and face

5 accessories

Cordless and rechargeable

S-shaped handle design



BRE630/00



Firmly grips even fine hairs

Easy to steer for effortless long-lasting results

The S-shaped handle helps you to steer all over the body. The widest head with ceramic discs epilates close to the skin to grab even fine hairs for quick and long-lasting results. Wet and dry use with 5 accessories for a personalised beauty routine.

Easy and effortless use

- Wet and dry for use in bath or shower
- Unique light ensures you don't miss fine hairs
- S-shaped handle for easy manoeuvrability on all body areas

Personalised body routine solutions

- Body care heads for personalised and convenient solutions
- Shaving head and trimming comb for a close shave
- Facial area and delicate area cap to remove unwanted hairs
- Includes massage cap

Thorough results

- Epilation head in unique ceramic material for better grip
- Patented epilation system
- Extra-wide epilator head
- Always use at a 90-degree angle for the best performance


Highlights

S-shaped handle design




The ergonomic handle is easy to hold and steer for maximum control and optimal reach on all body areas.

Micro ridged ceramic discs

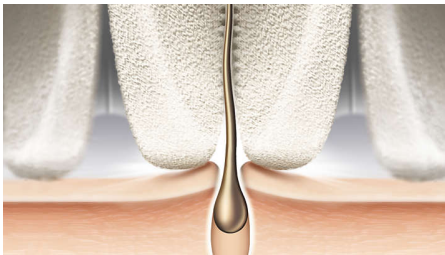

Our epilator head is unique in being made from a rough ceramic material that grabs hair firmly: even fine hairs won't slip from its grip.

Extra-wide epilator head

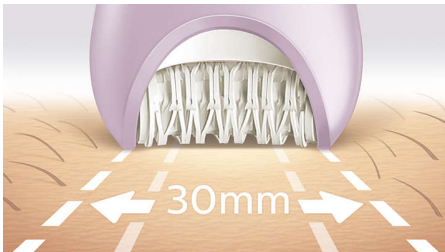

Extra-wide epilator head covers more skin with every stroke for faster hair removal.


Patented epilation system



All of our Philips epilators have a unique system where the tweezers lift and gather the lying hair and guide it to the pulling point,

firmly grabbing and pulling out the hair. Combined with the unique round ceramic discs, this means it epilates closer to the skin for optimal results and more gentle treatment.

Wet and dry use

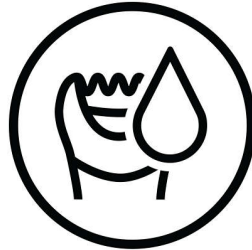

For a gentle and comfortable use during your shower or bath routine with anti-slip grip for optimal wet and dry use.

Opti-light



Unique light ensures you don't miss fine hairs for best epilation results for all body parts.

Body care heads

Body care heads will bring more personalised and convenient solutions to her individual beauty routine for hair removal and beyond.

90-degree angle



The Philips Satinelle will always give you the best performance when used at a 90-degree angle.

Shaving head and trimming comb

The shaving head provides a close shave and more gentleness in all body areas. It comes with a trimming comb to style your bikini area.

Facial and delicate area cap



For more gentleness in all body areas, it includes a facial area cap to easily remove unwanted facial hairs and a delicate area cap for underarm and bikini hair

Massage cap



Massage cap eases the epilation sensation.

Specifications

Accessories

Cleaning brush
Pouch: Basic pouch
Shaving head
Trimming Comb
Facial area cap
Delicate area cap
Massage cap

Power

Charging: 5-min quick charge, Rechargeable, 1.5-hour charging time
Battery Type: Lithium-ion
Usage time: up to 40 minutes

Technical specifications

Number of catching points: 32
Number of discs: 17
Pulling actions/second speed 1: 960
Voltage: 15 V / 5.4 W
Pulling actions/second speed 2: 1066

Features

Speed settings: 2 settings

Ease of use

Cordless
Handle: S-shaped handle
Wet and dry use
Opti-light

Performance

Epilator discs: Ceramic discs
Epilator head: 30 mm
Epilation system: Patented epilation system

